









PUMP SERVICE BOOK

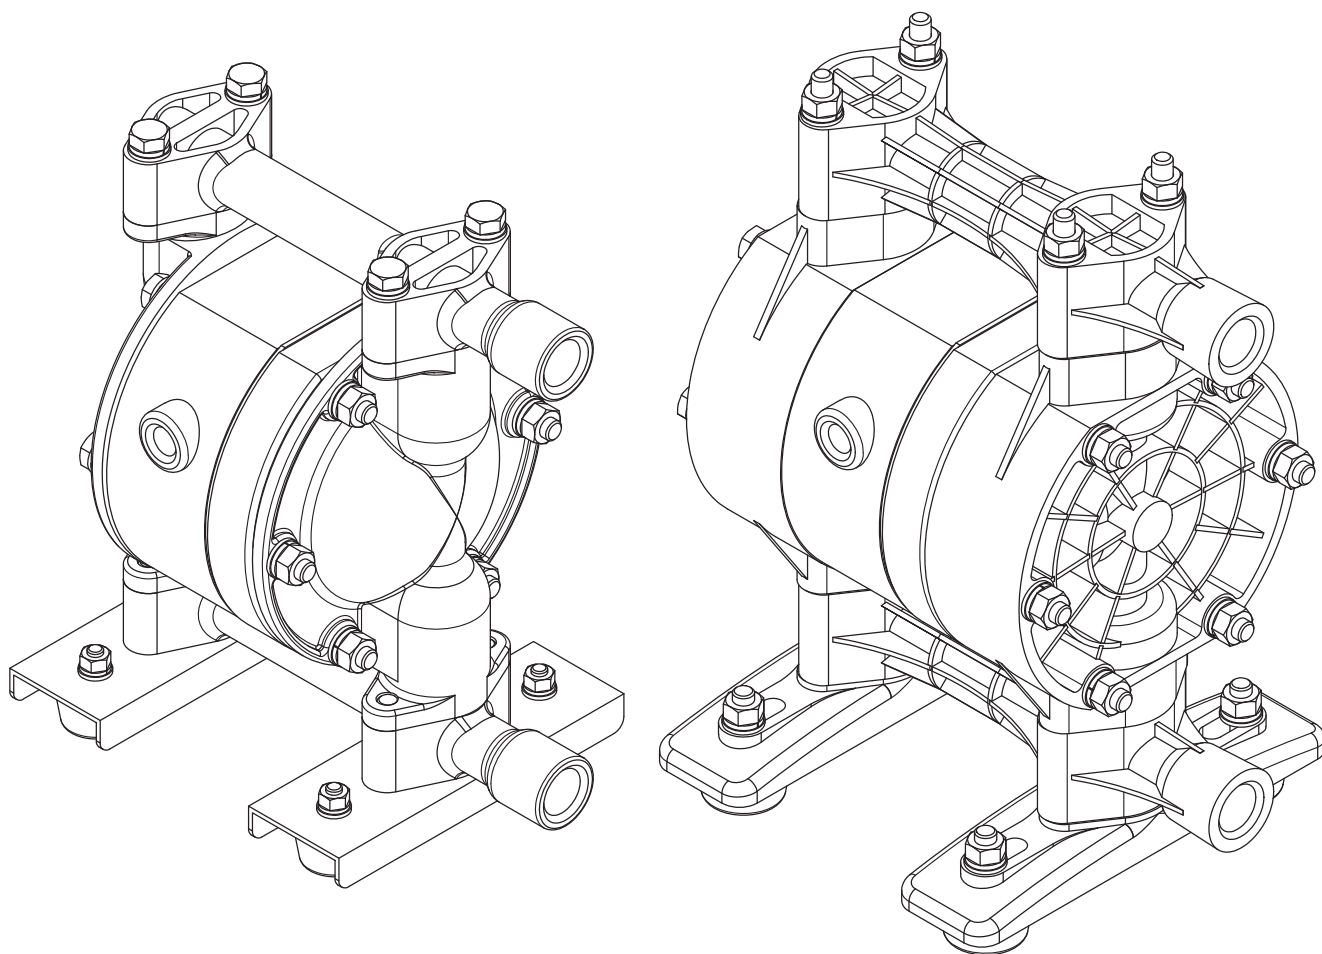

TC-X151A TC-X151S TC-X151P TC-X151V TC-X151D






Series Pumps

1-① AC AN AT AH AS SC SN ST SH SS

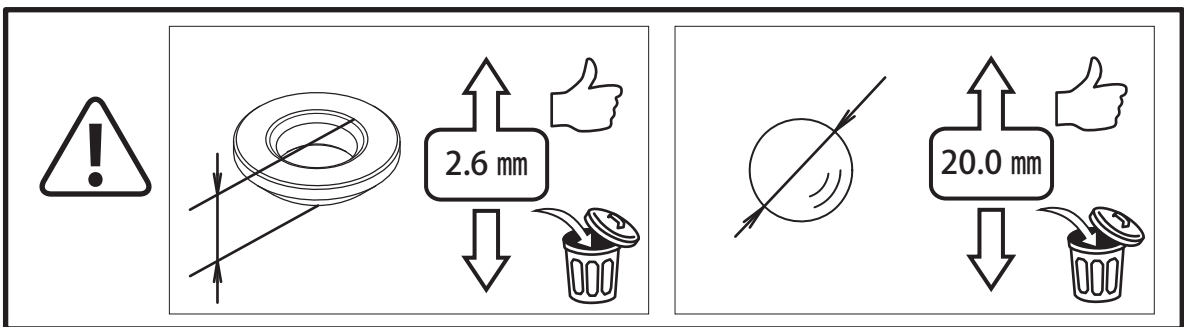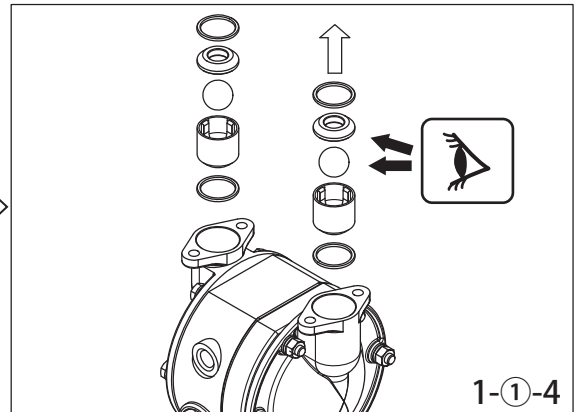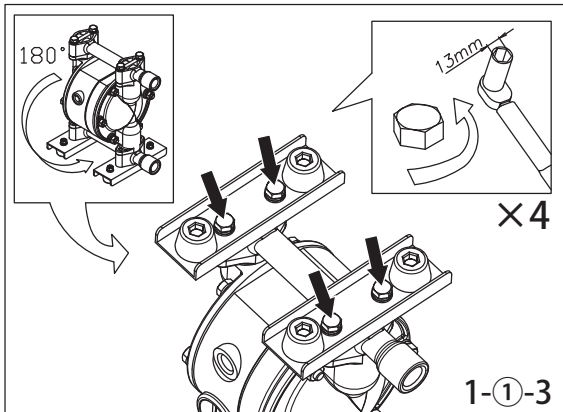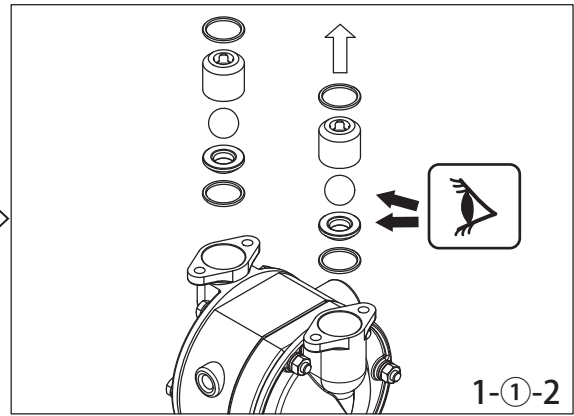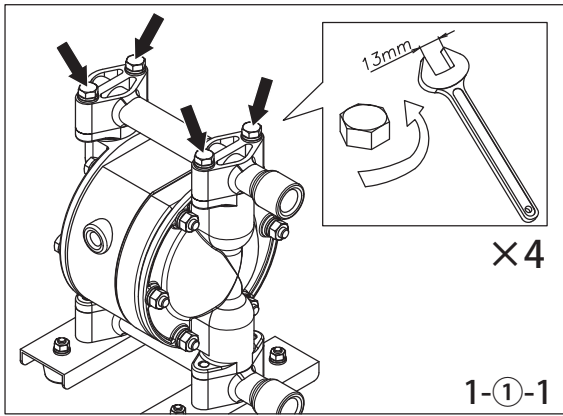









1

1-② PC PN PT PH PS
VT

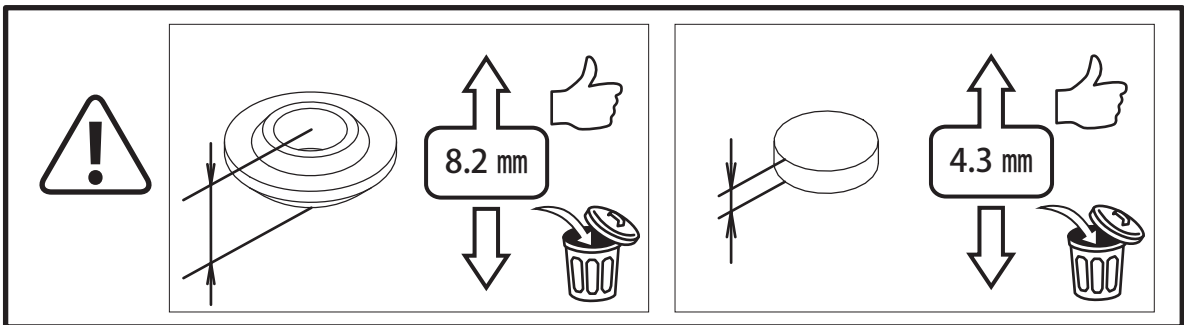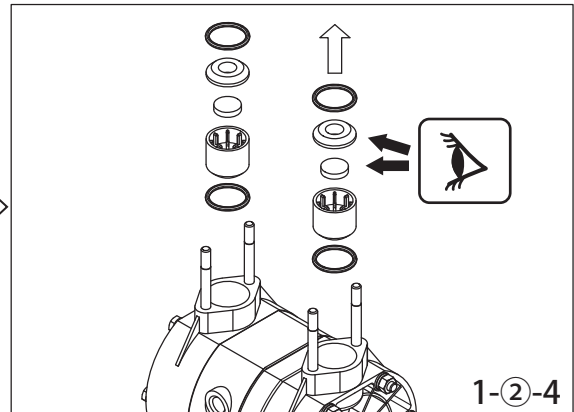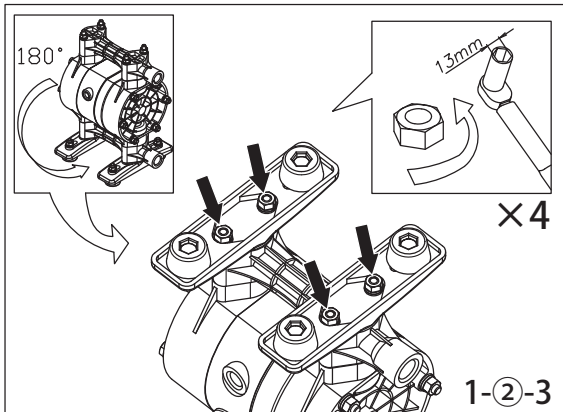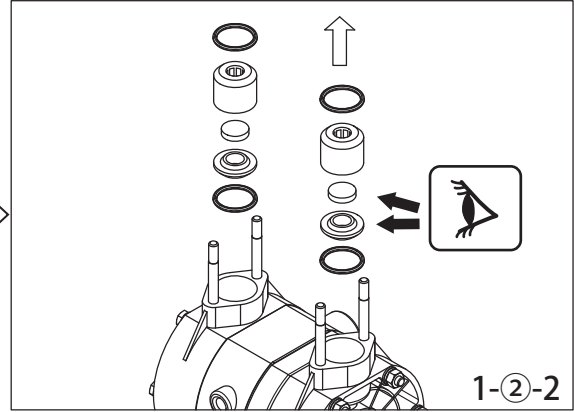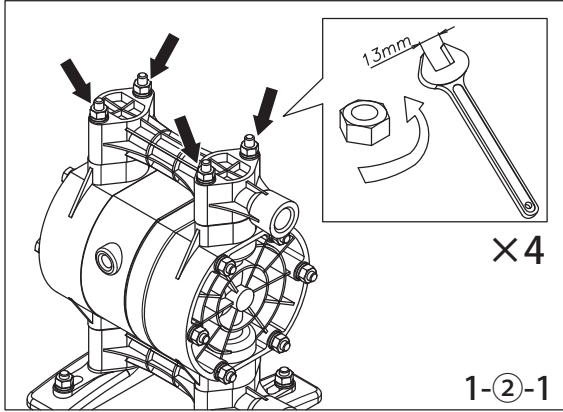

2-① AC AN AT AH AS SC SN ST SH SS


2-② PC PN PT PH PS VT

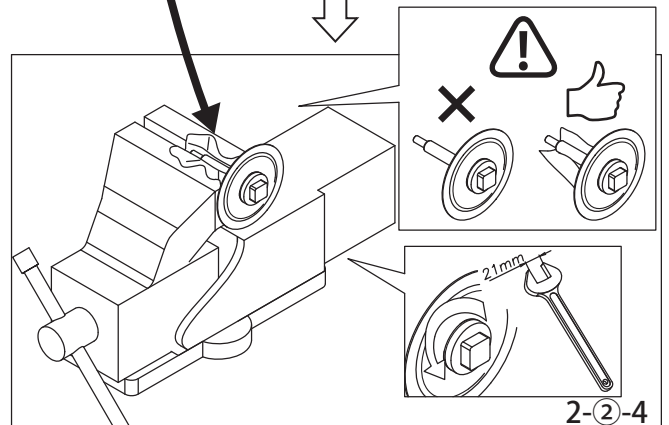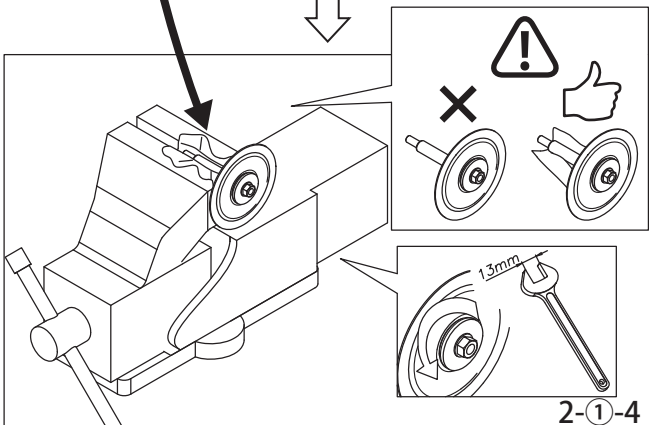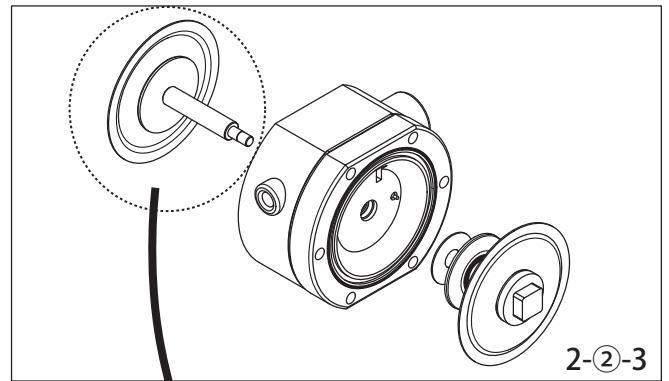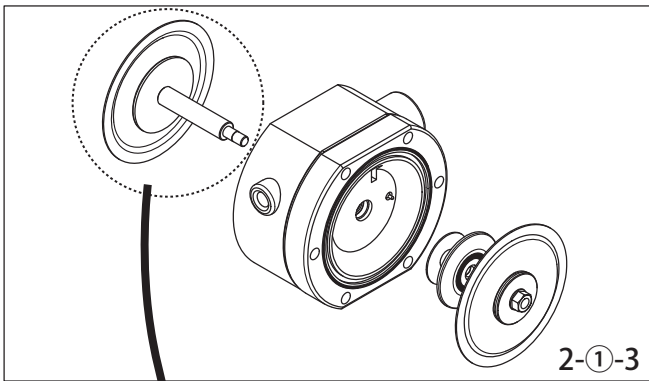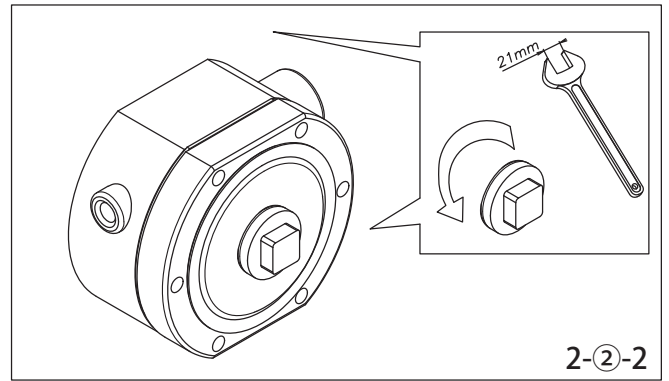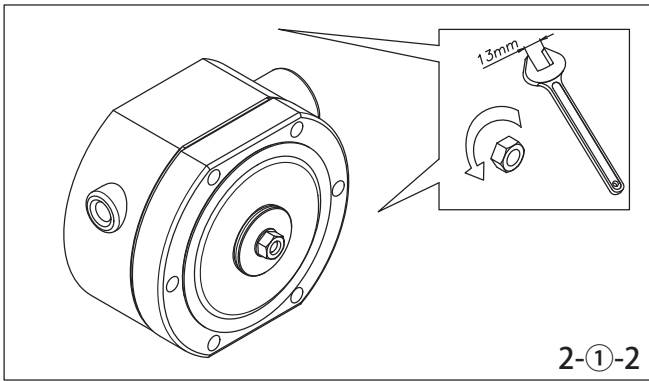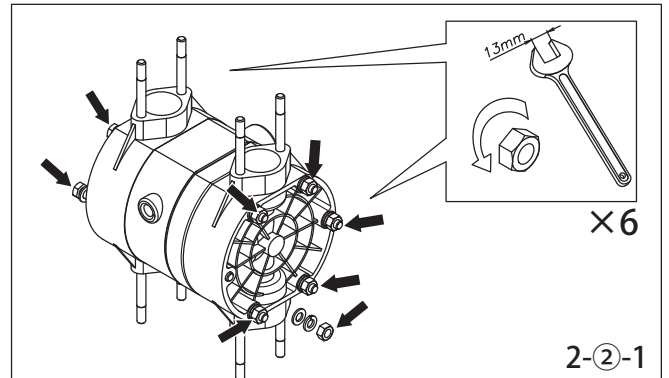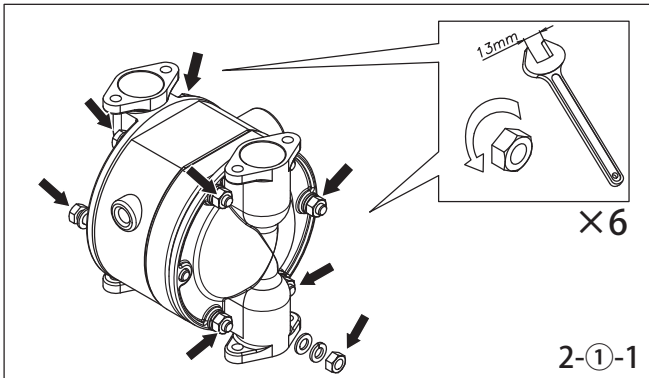

3



3-①

AC SC
AN SN
AT ST

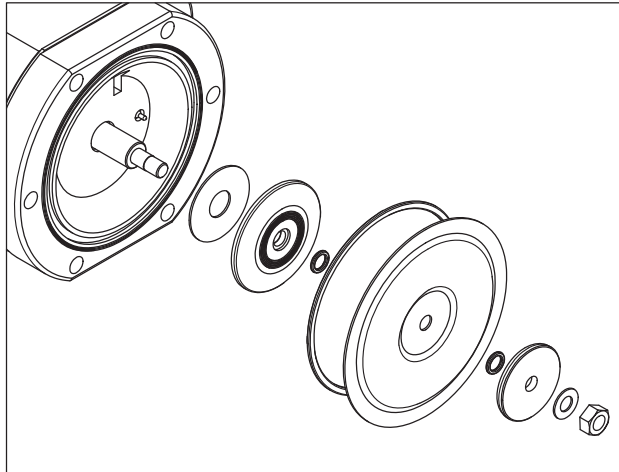


3-②

AH SH
AS SS

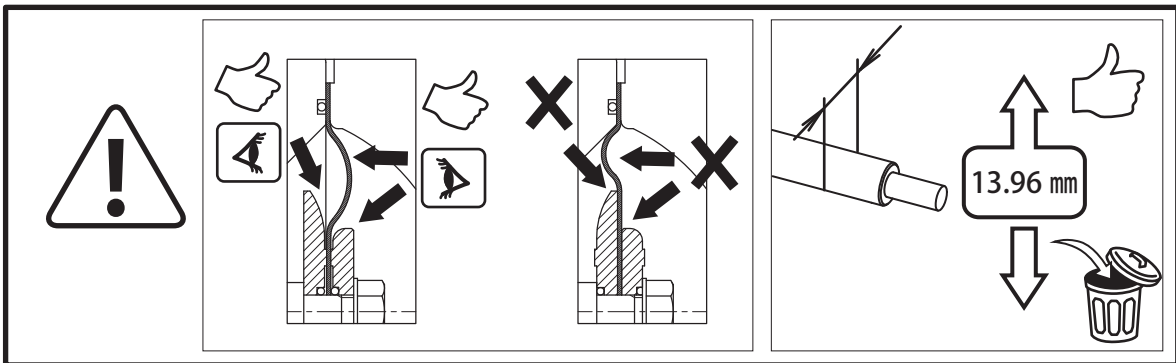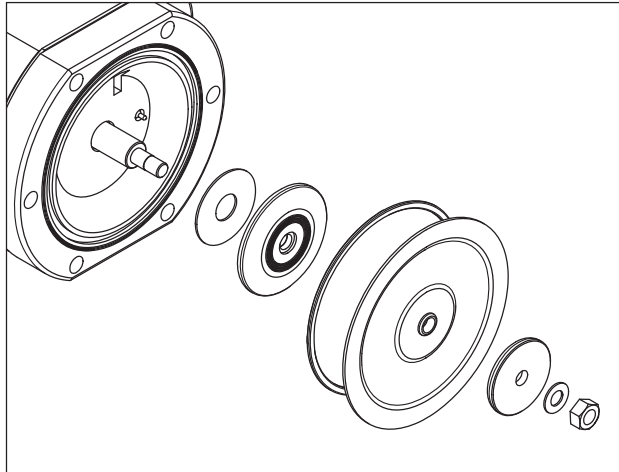



3-③




PC VT
PN
PT



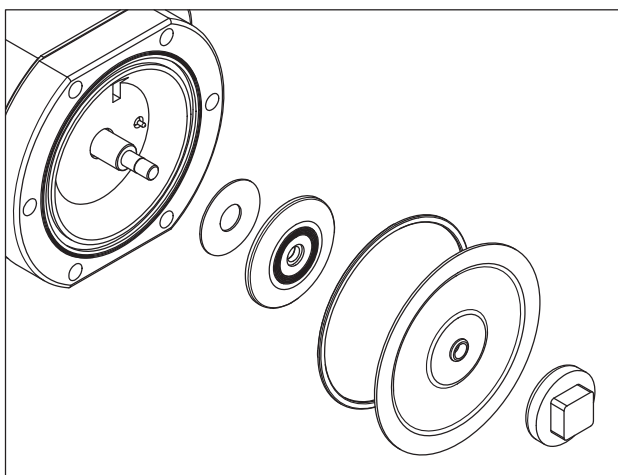


3-④

PH
PS

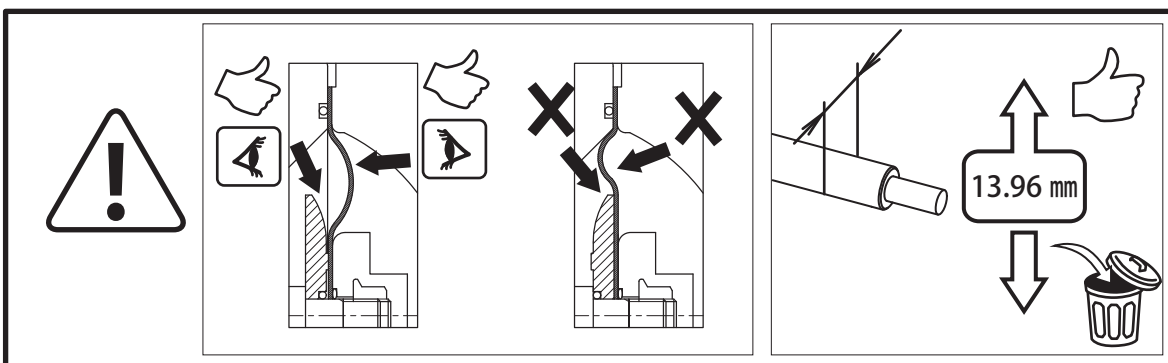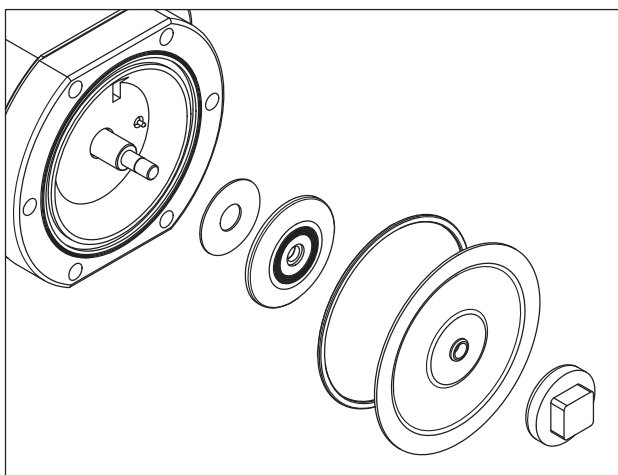

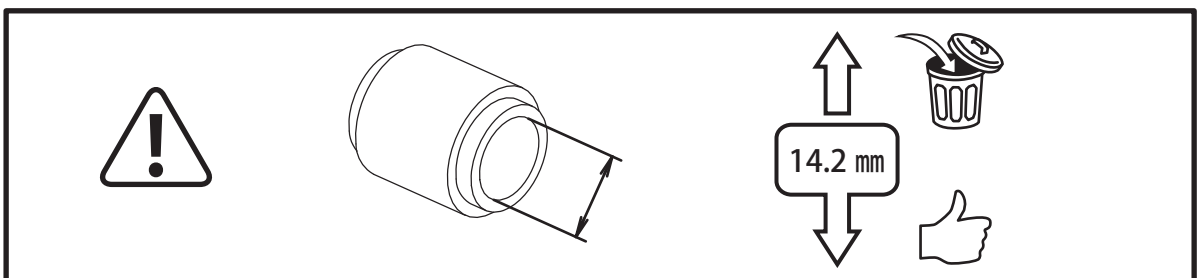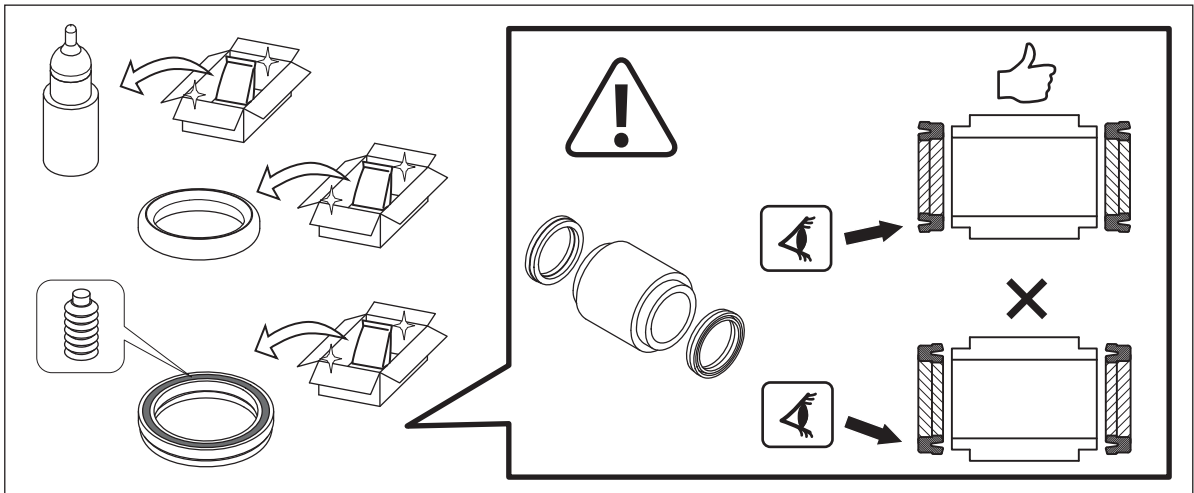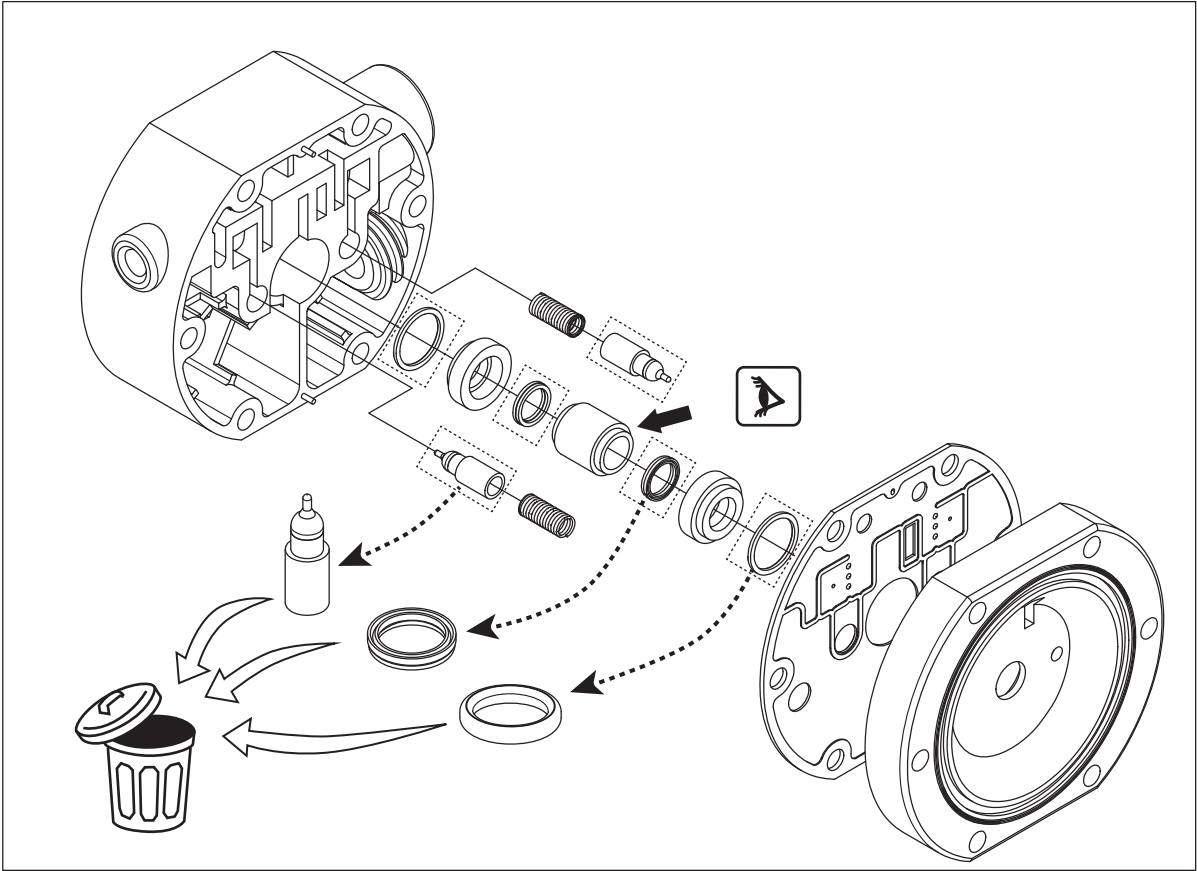

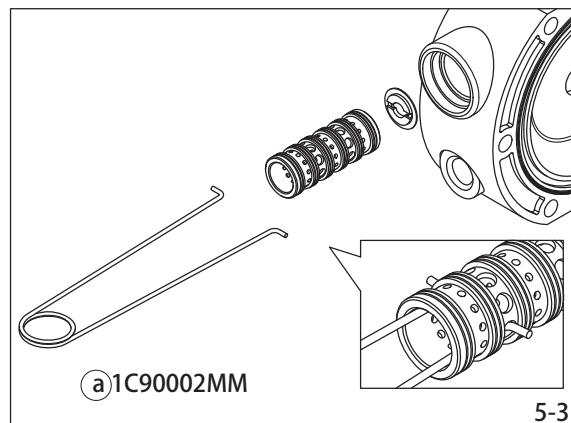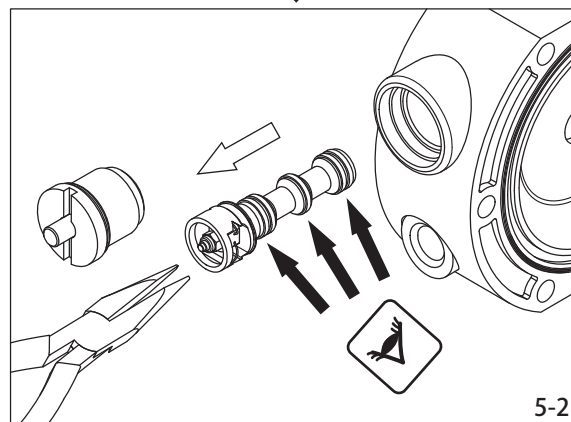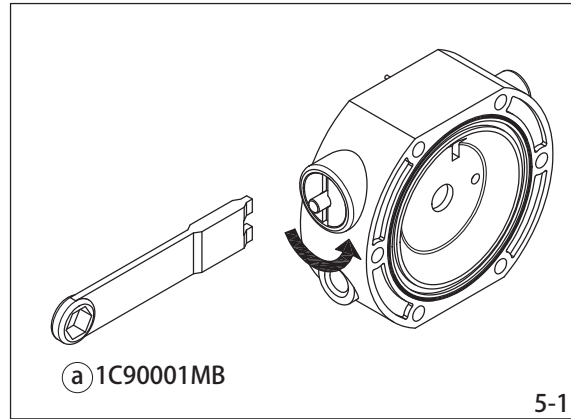

6

6-1

