




PUMP SERVICE BOOK





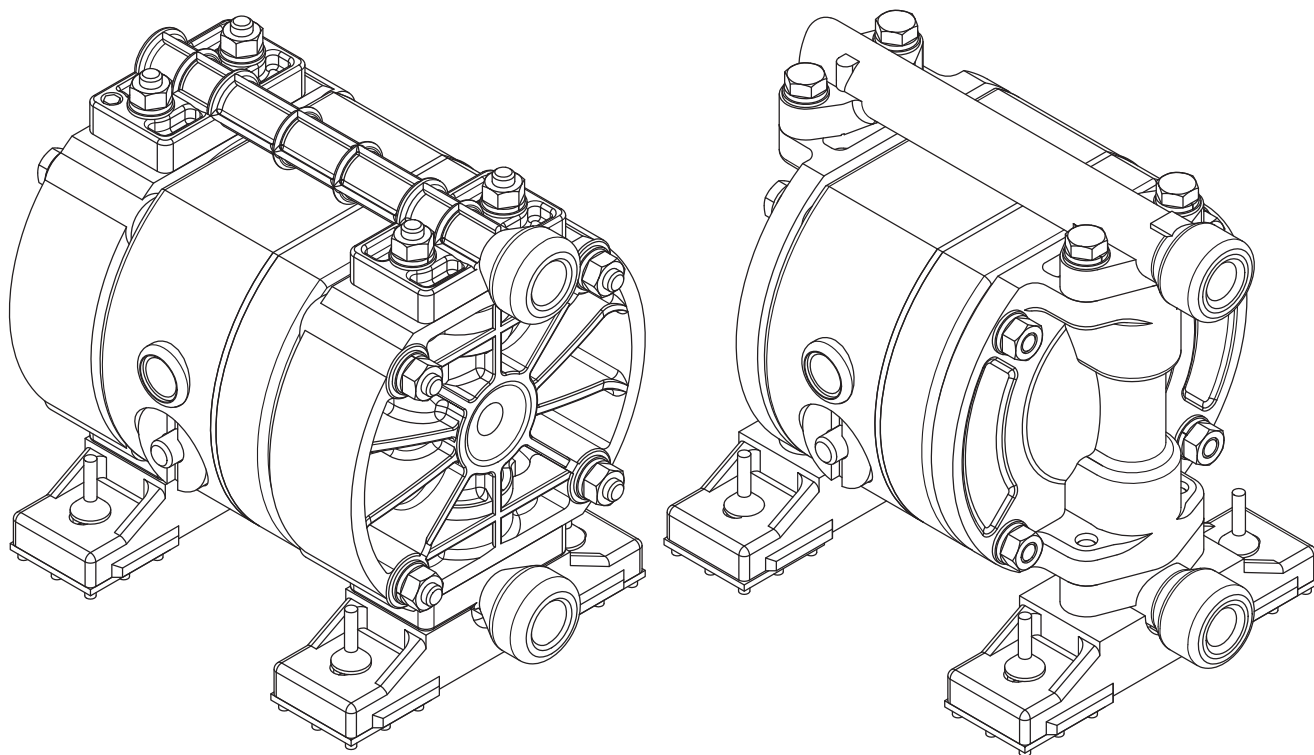


TC-X030V TC-X050A TC-X050S
TC-X050P TC-X050P-PP TC-X050V TC-X050D

Series Pumps









1-① AT ST

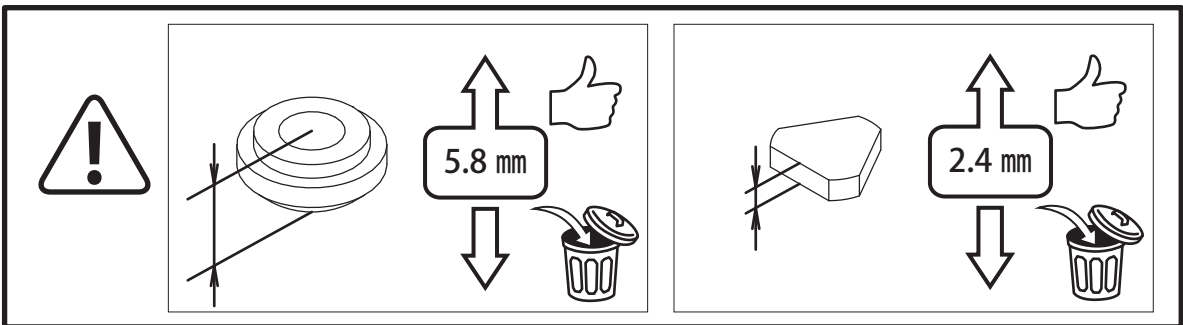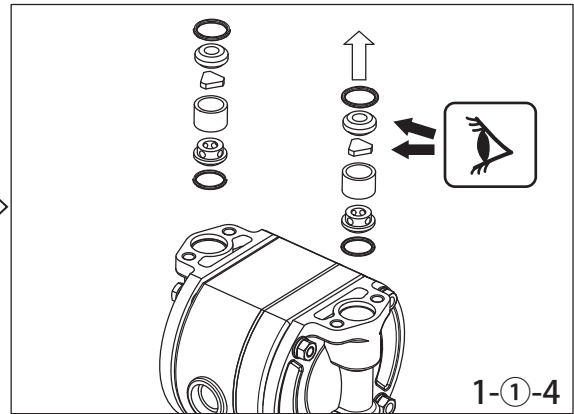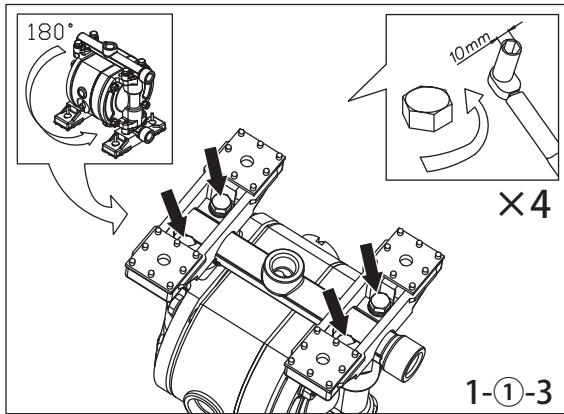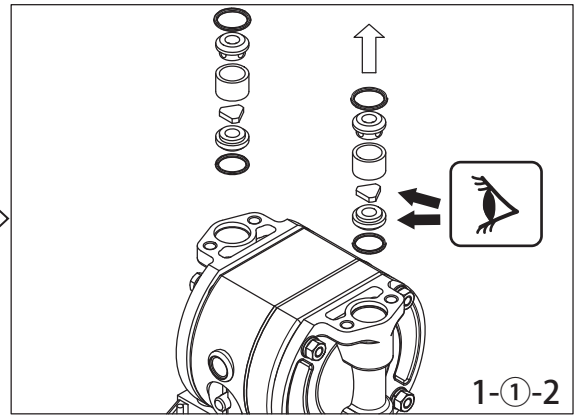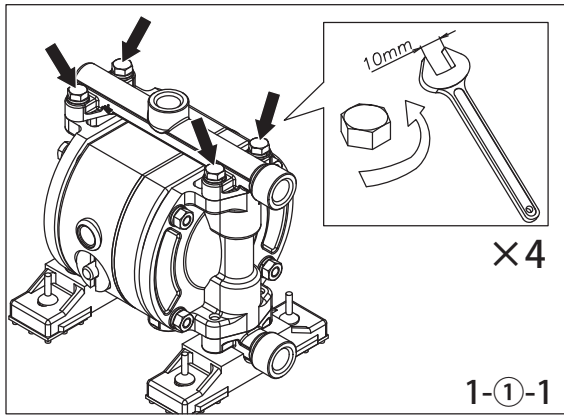









1

1-② PT VT DT PT-PP

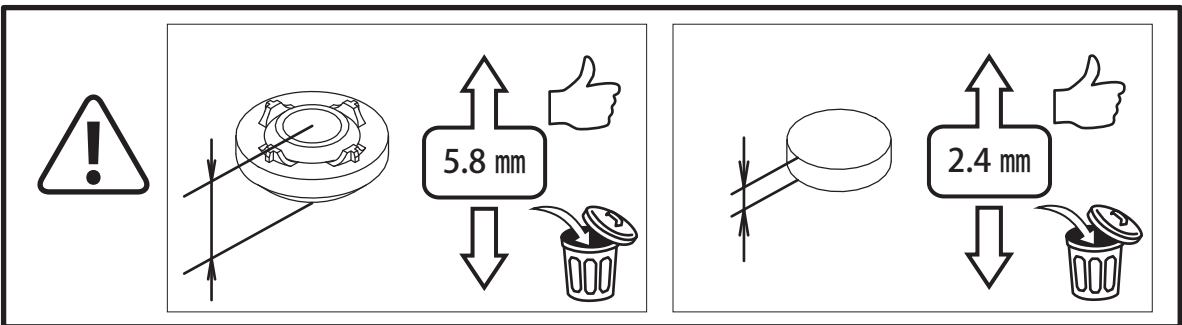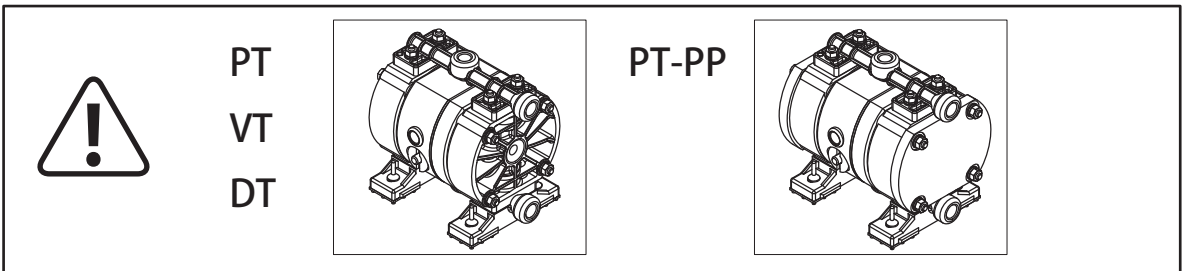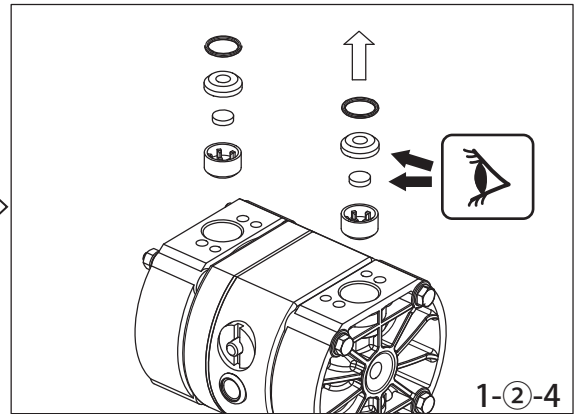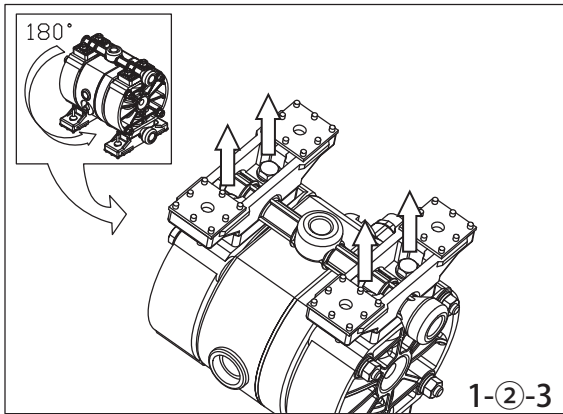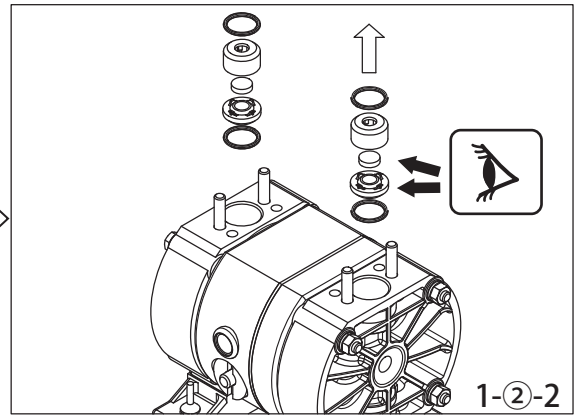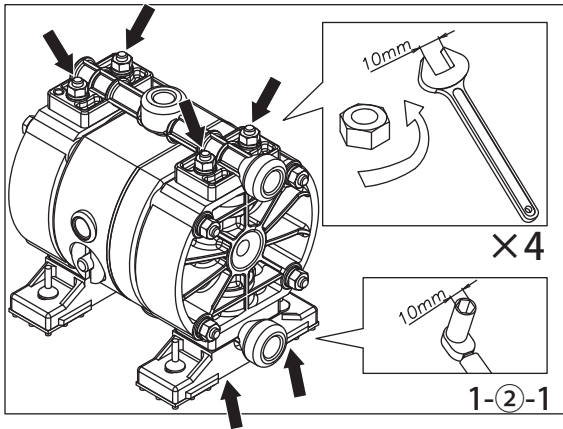

2-① AT ST


2-② PT VT DT

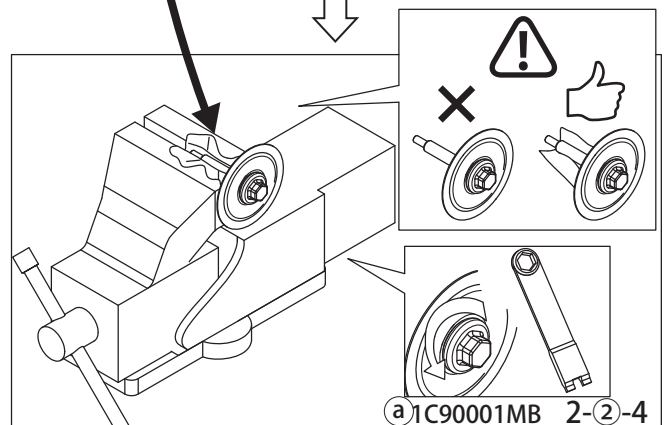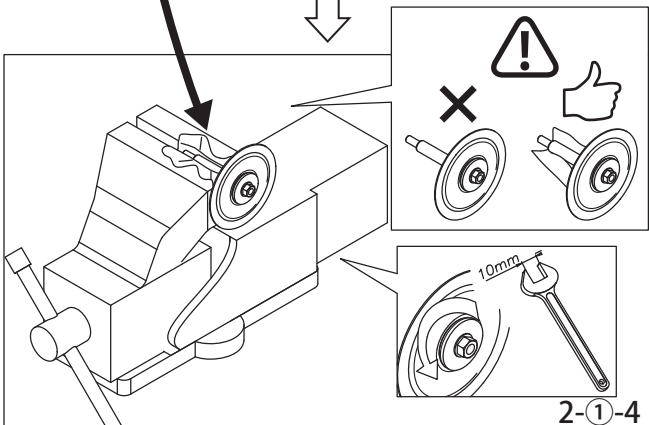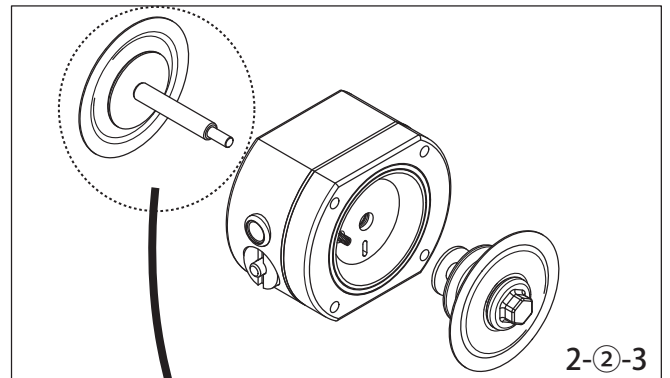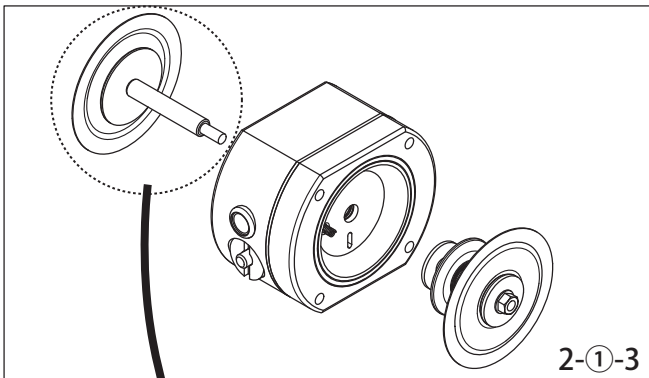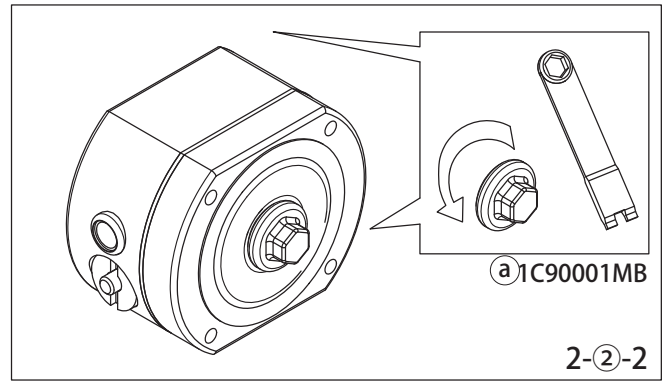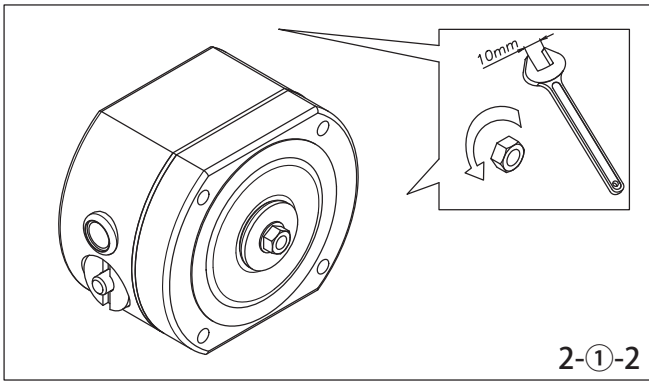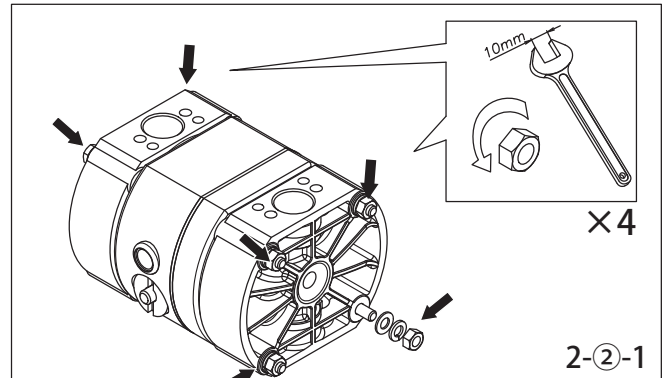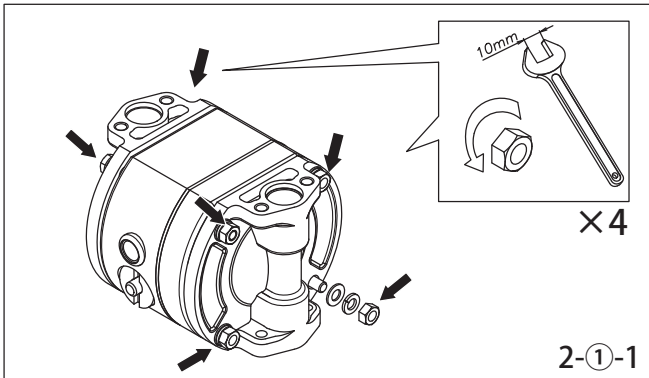

3




3-①




AT
ST

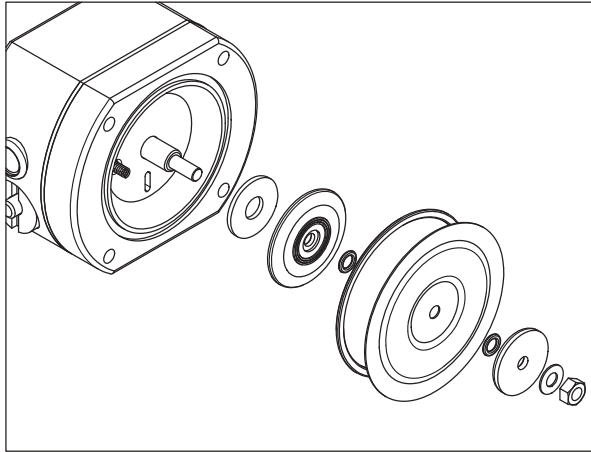




3-②



PT
VT
DT

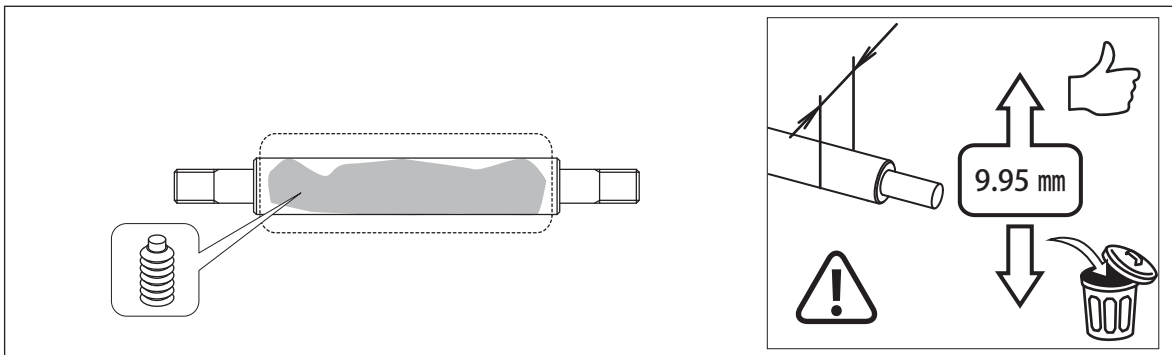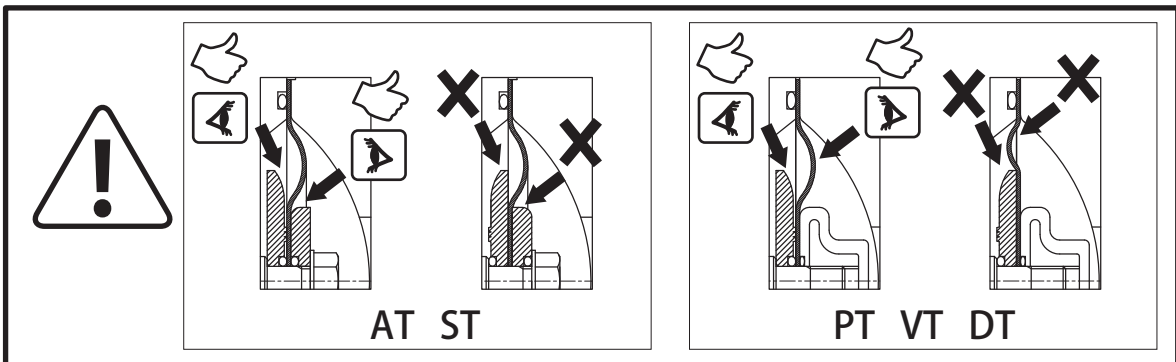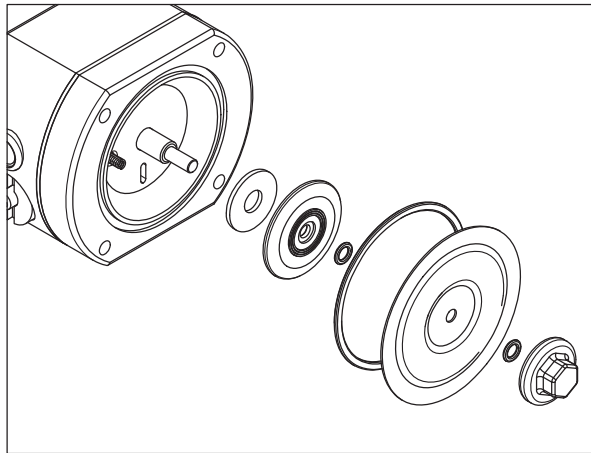

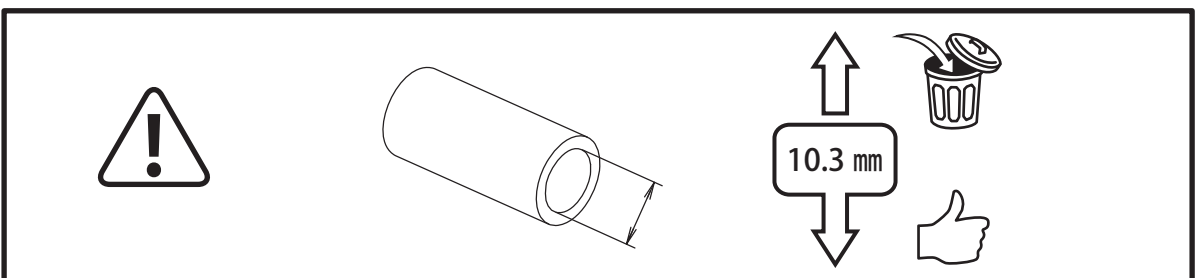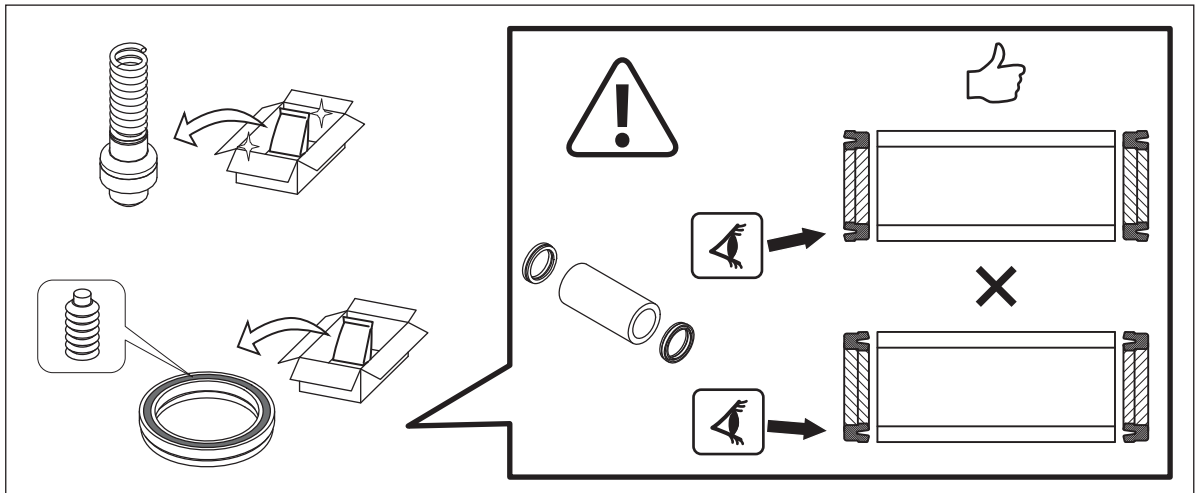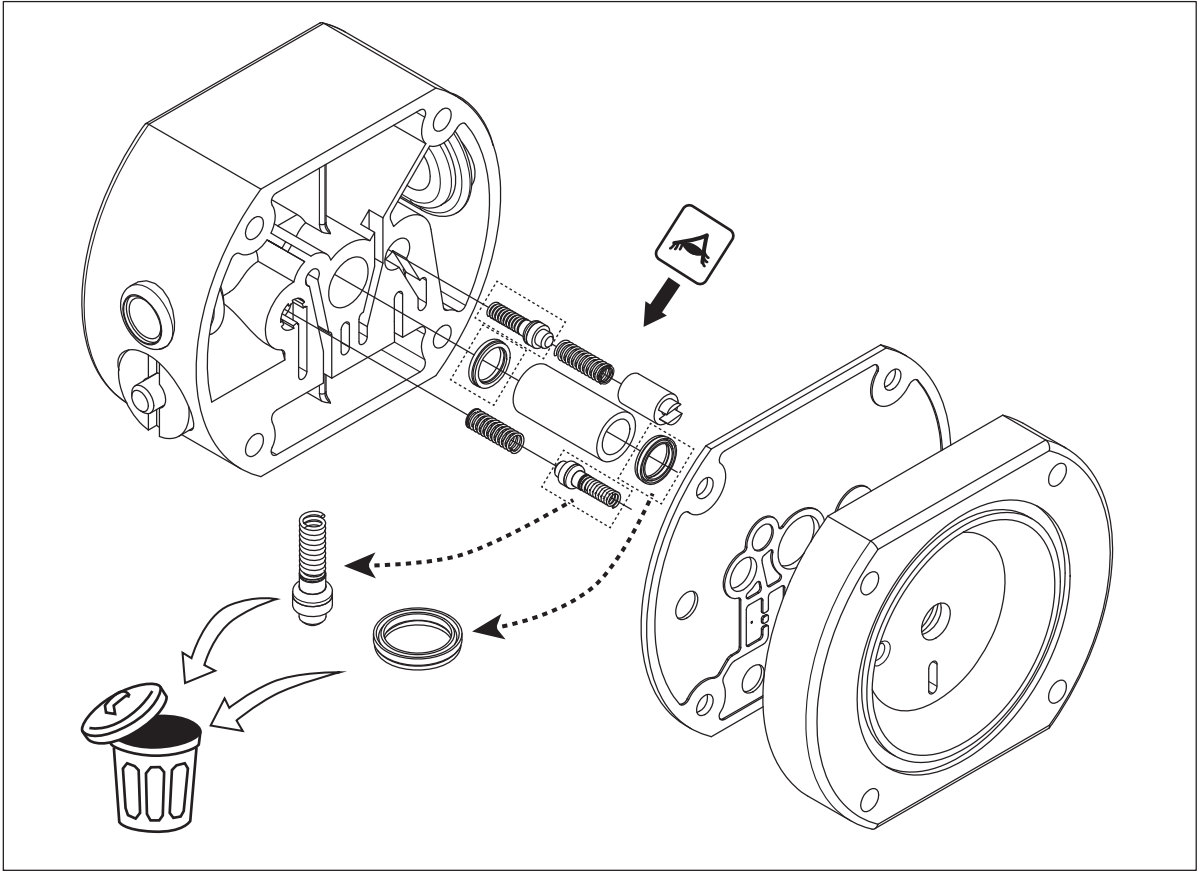

5

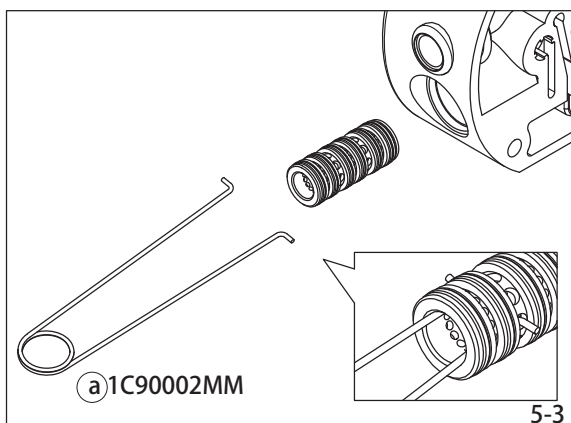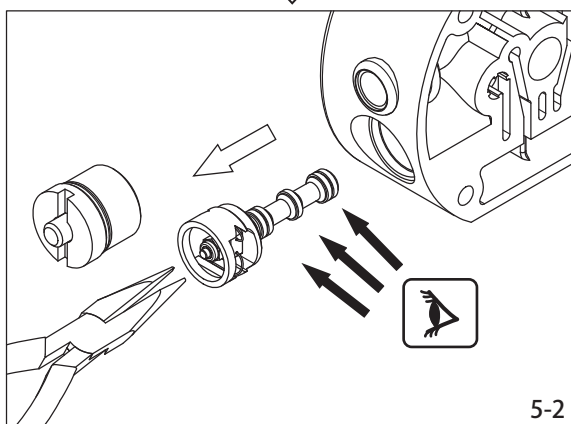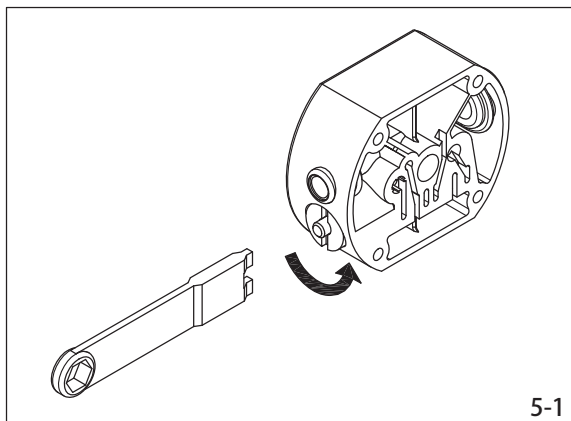

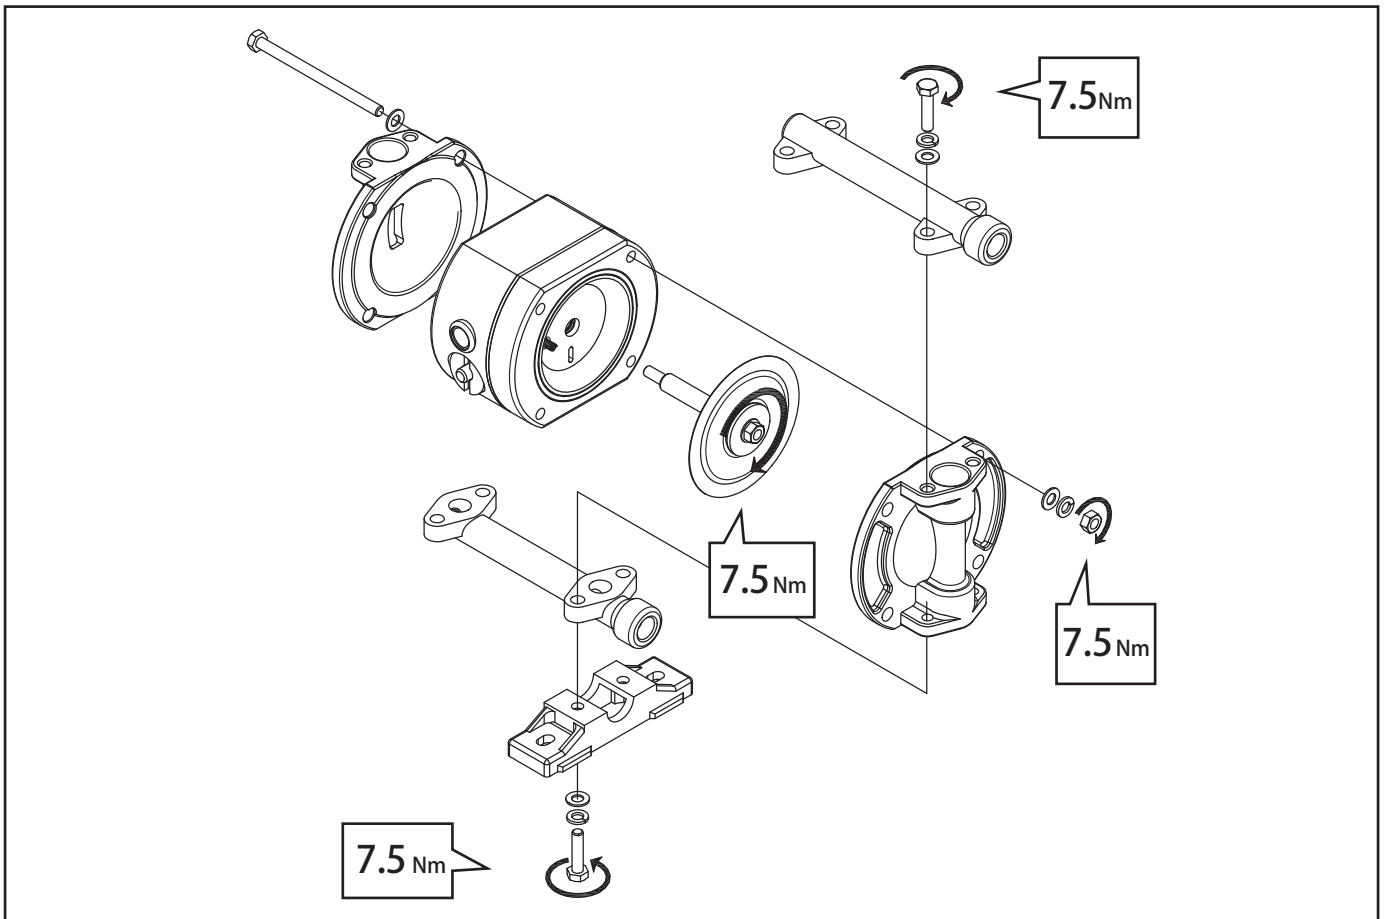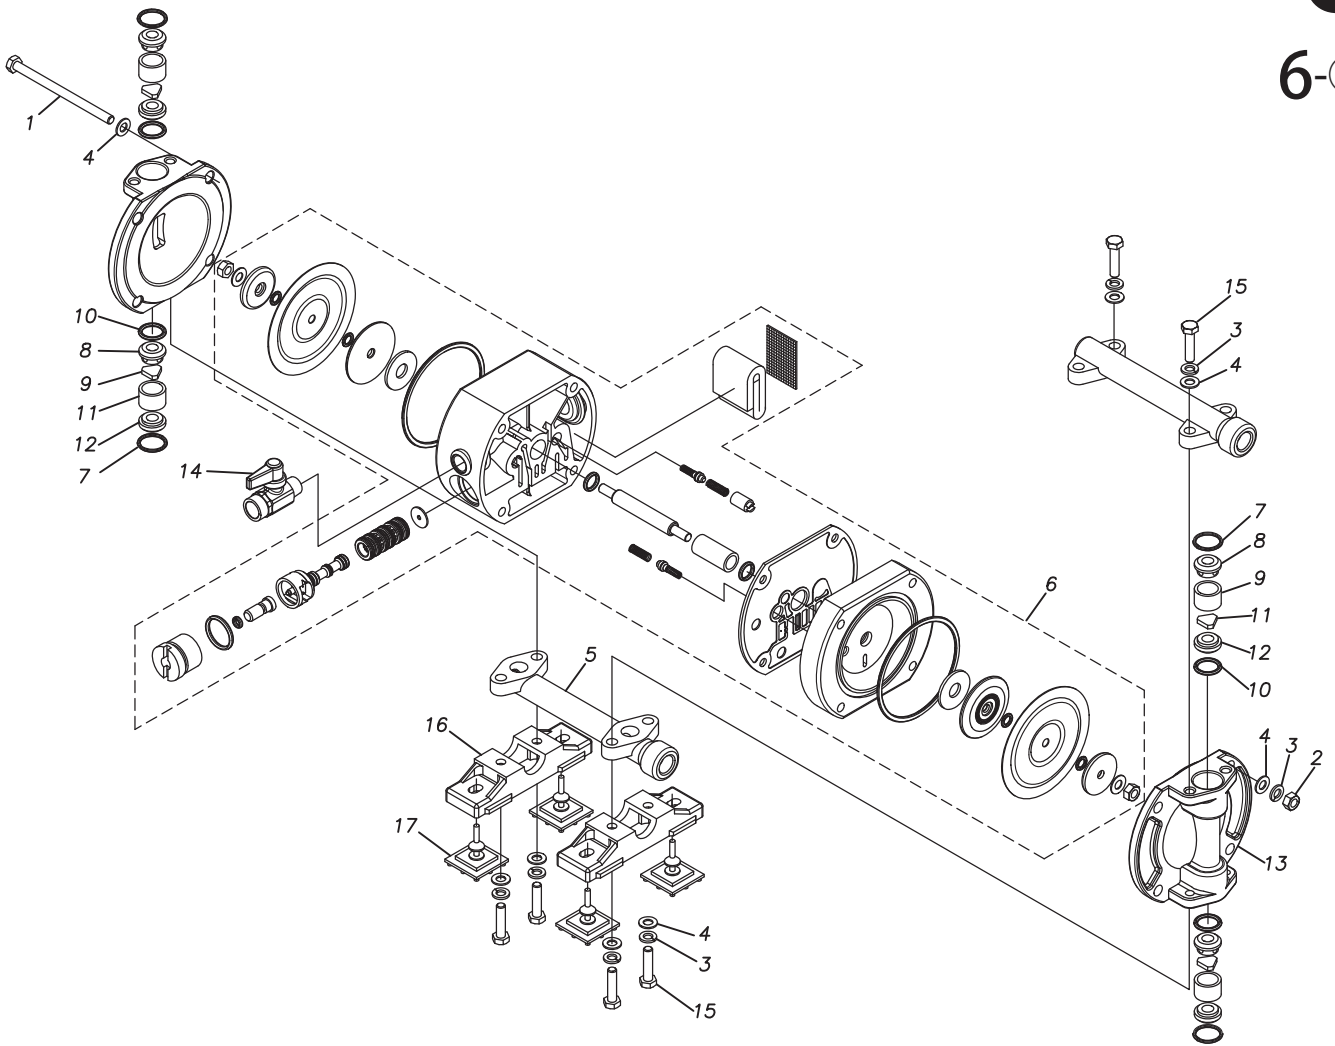

6

6-2

