


PUMP SERVICE BOOK

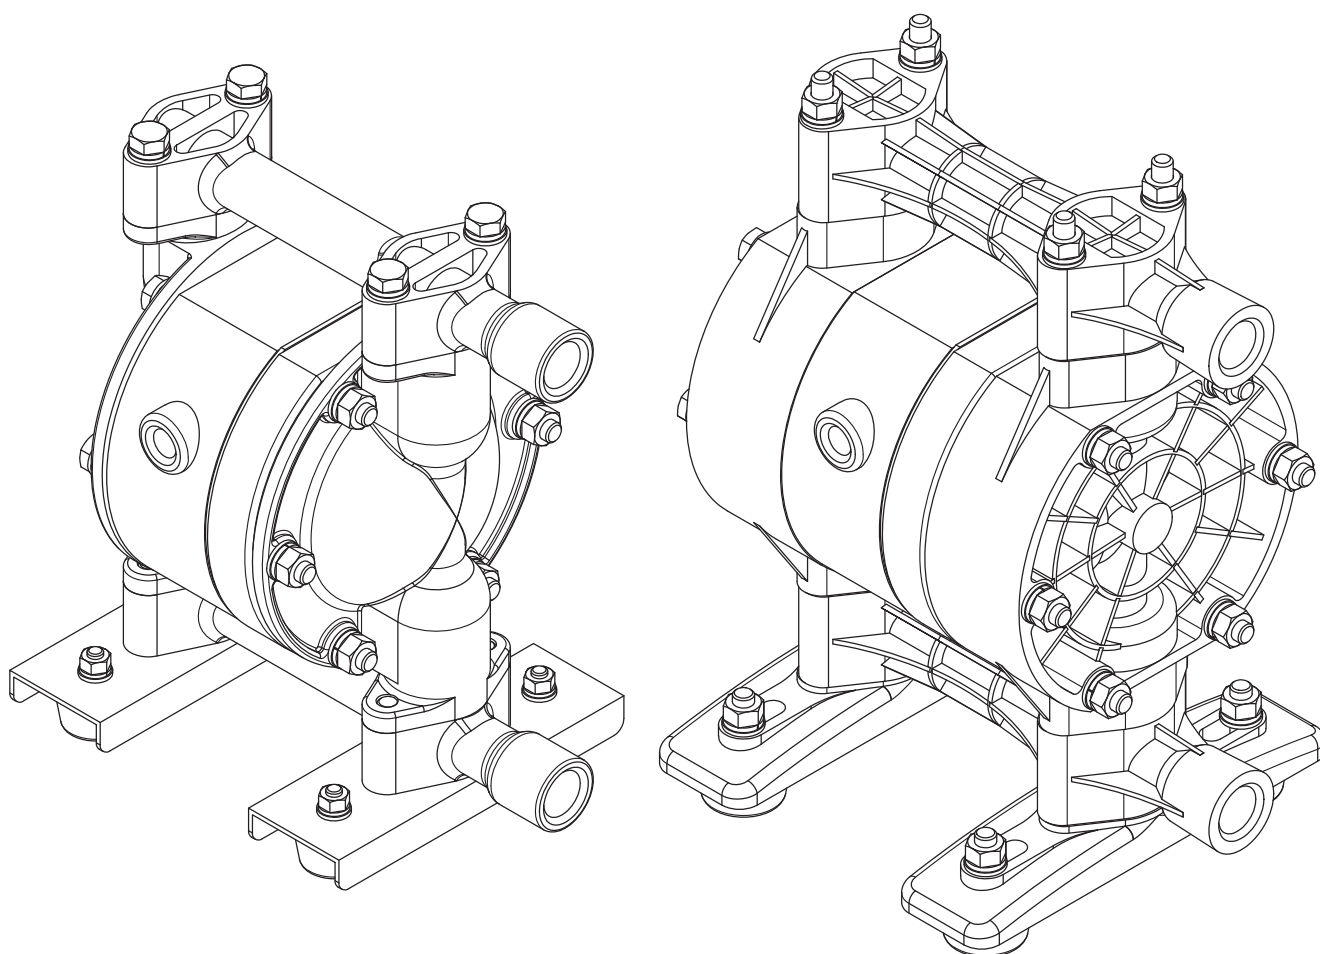


TC-X151A TC-X151S TC-X151P TC-X151V TC-X151D

Series Pumps








1-① AC AN AT AH AS SC SN ST SH SS




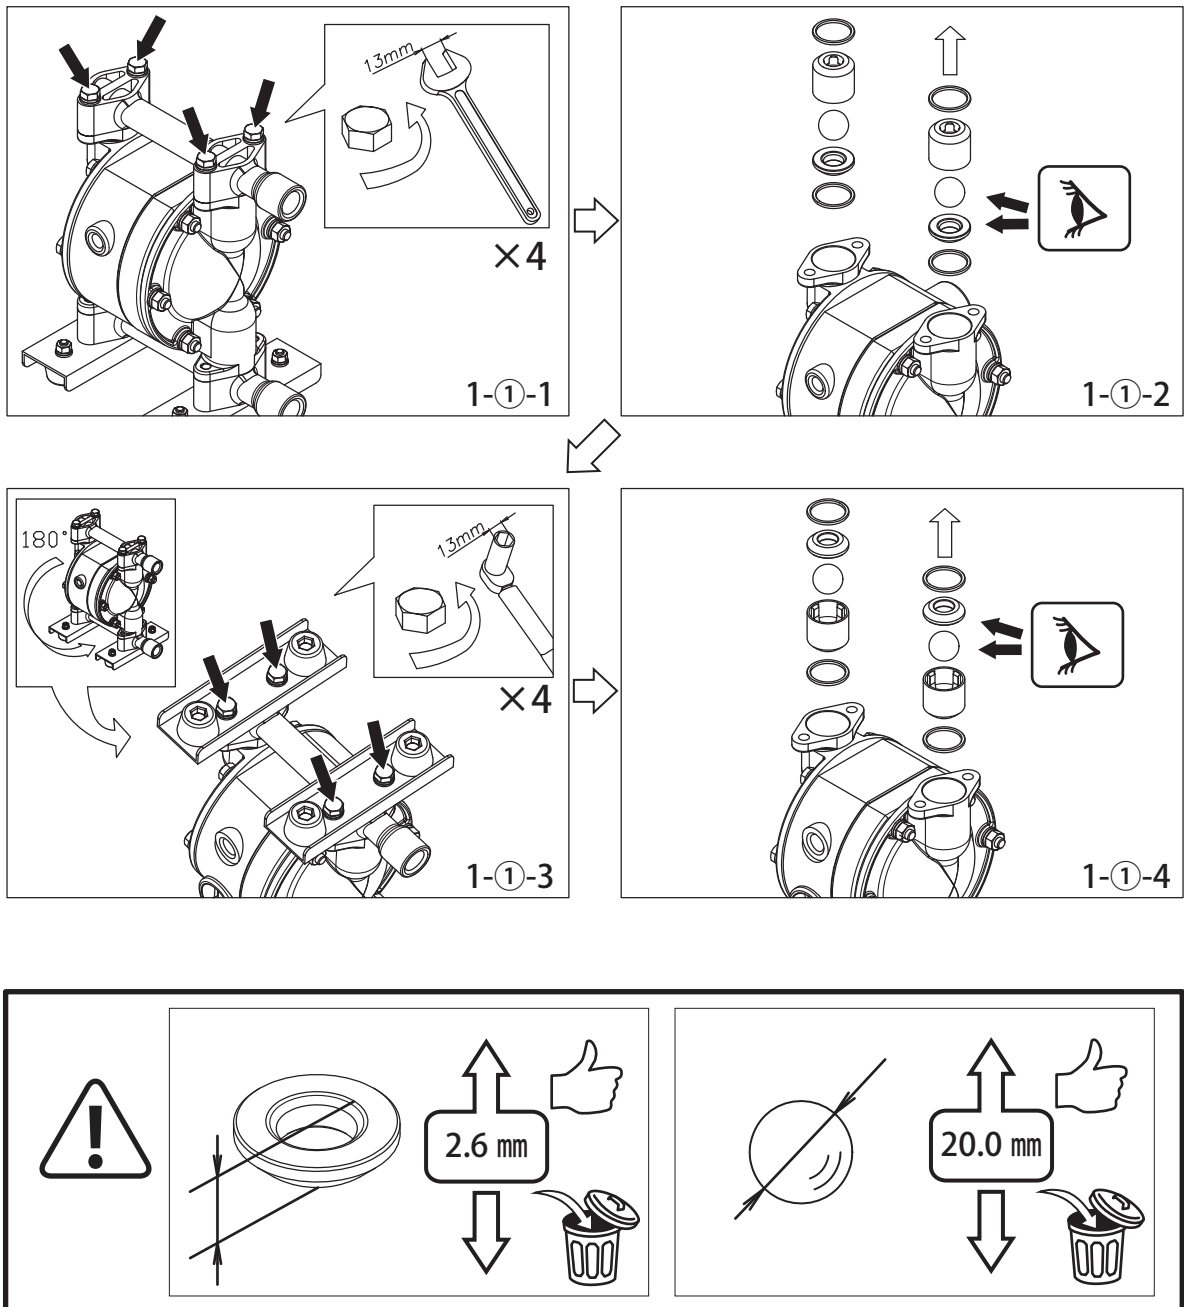


1





1-② PC PN PT PH PS VT

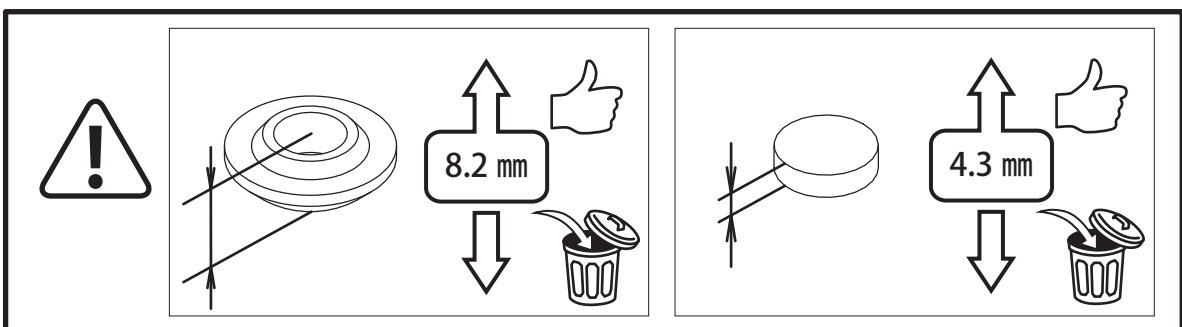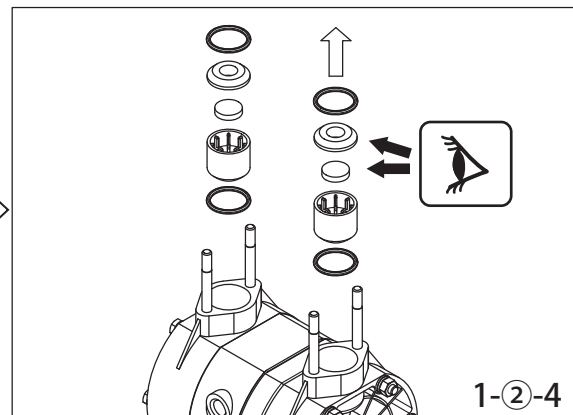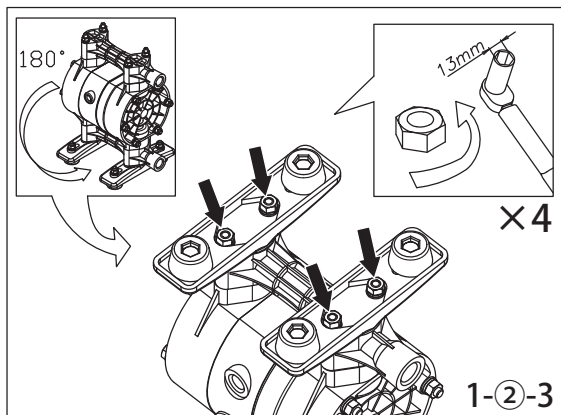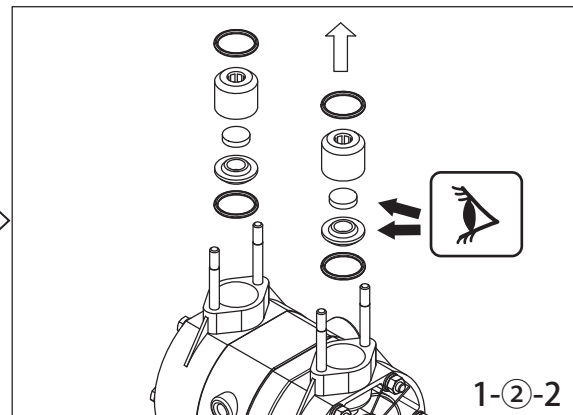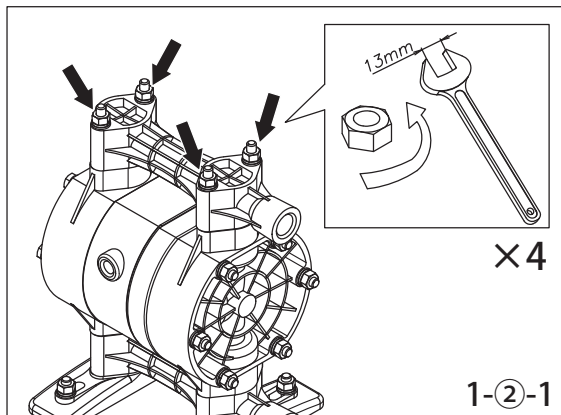

2-① AC AN AT AH AS SC SN ST SH SS

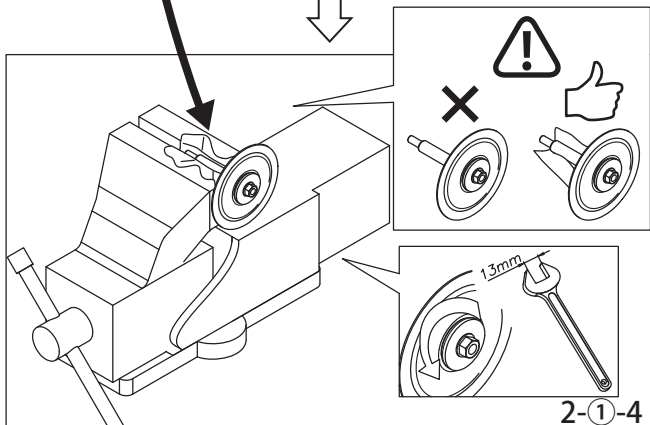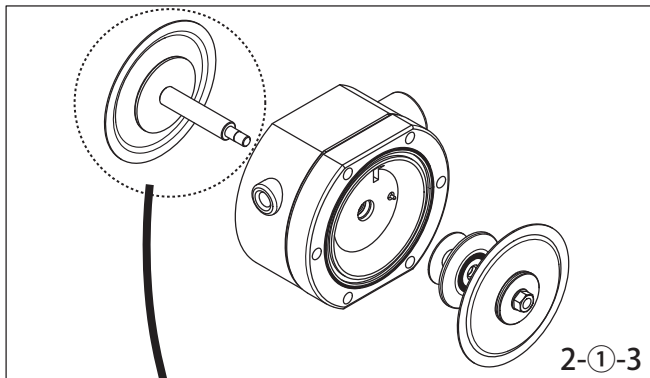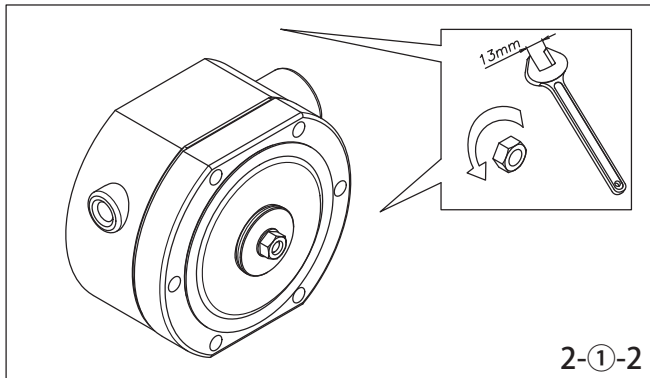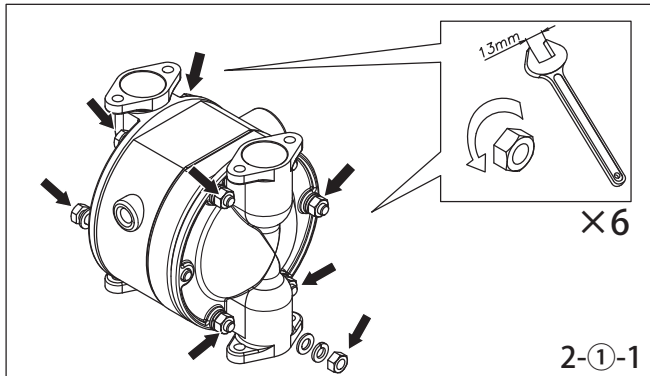


2-② PC PN PT PH PS VT

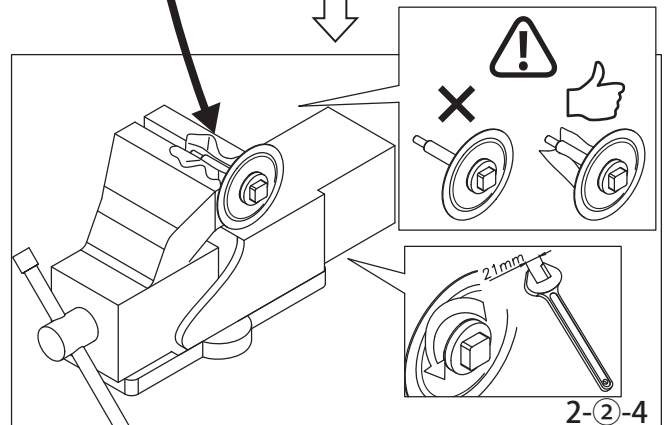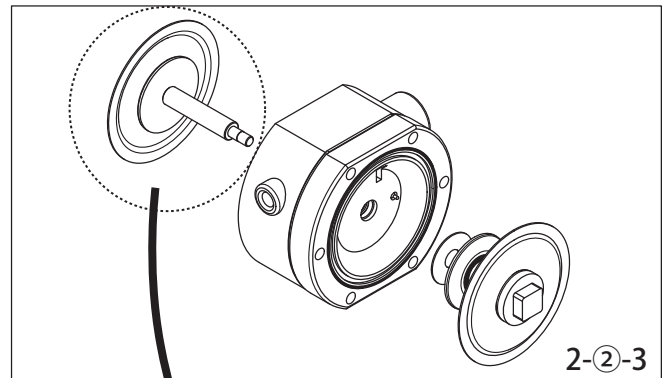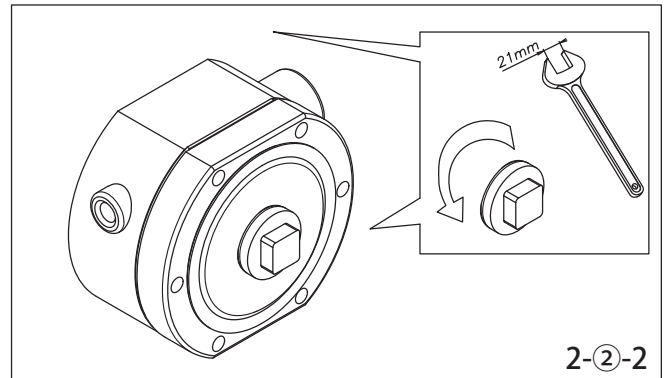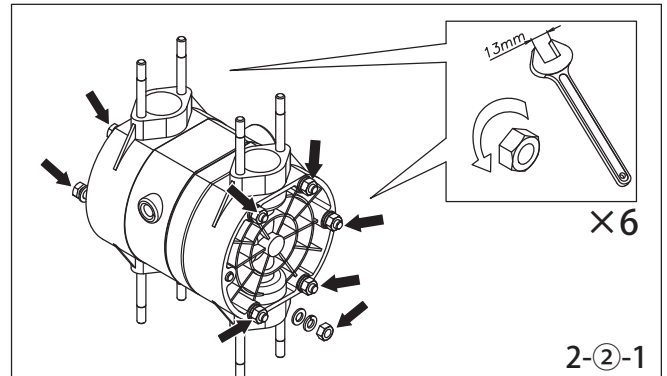

3



3-①

AC	SC
AN	SN
AT	ST

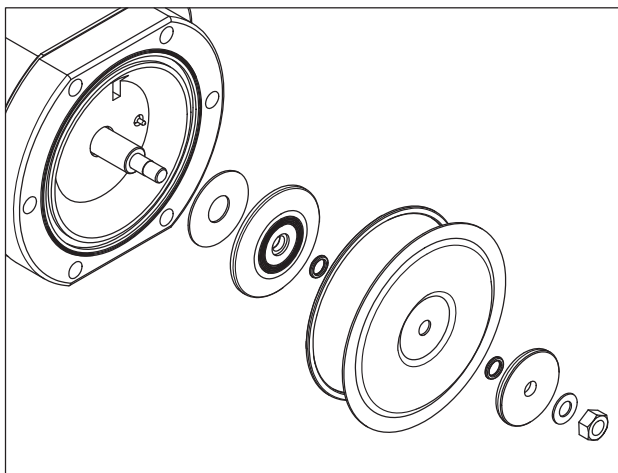


3-②

AH	SH
AS	SS

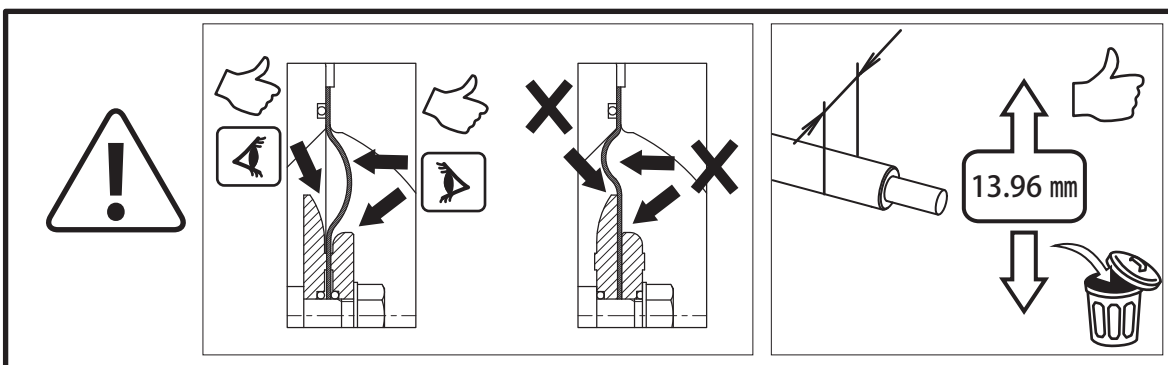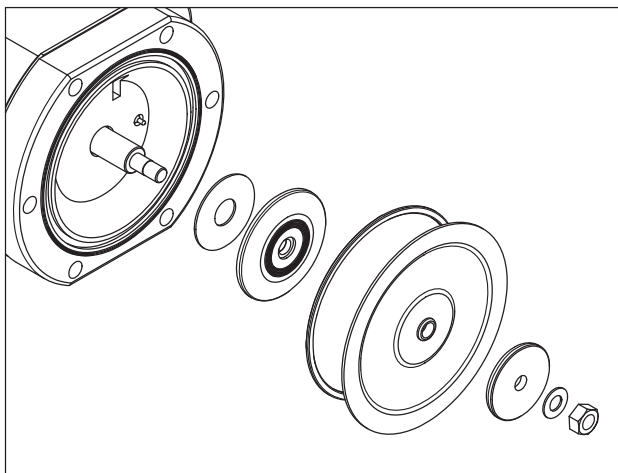



3-③




PC VT
PN
PT




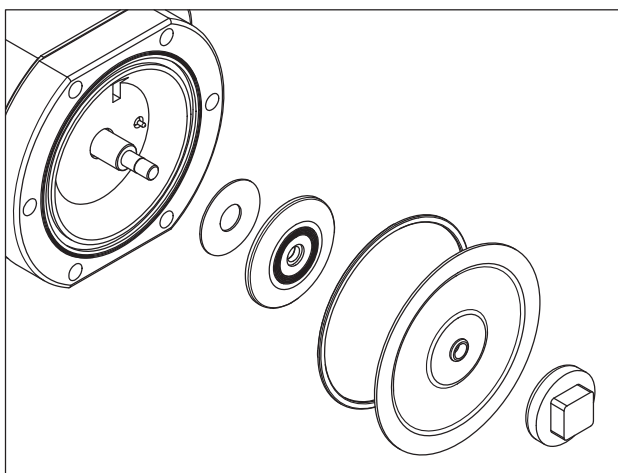


3-④

PH
PS

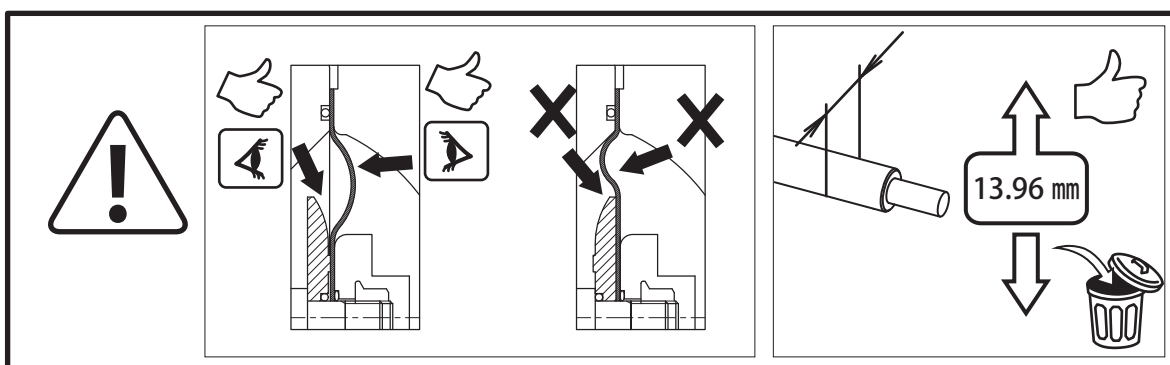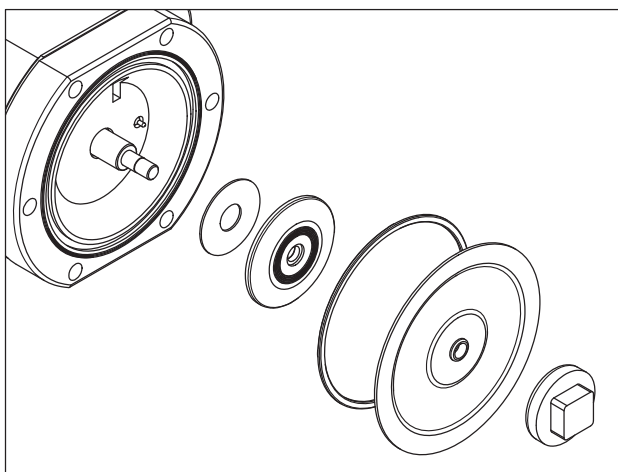

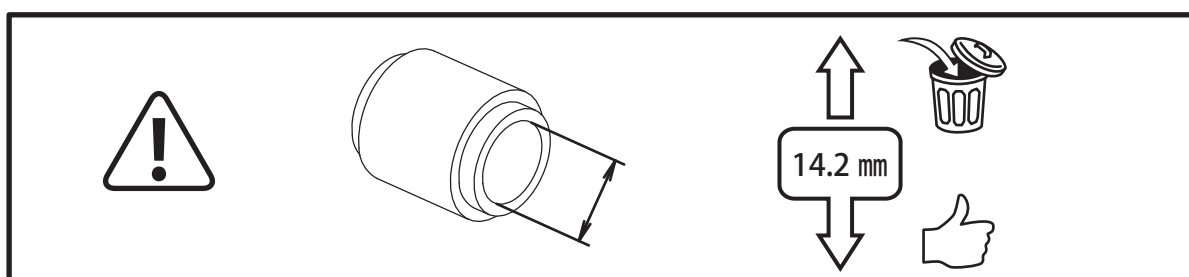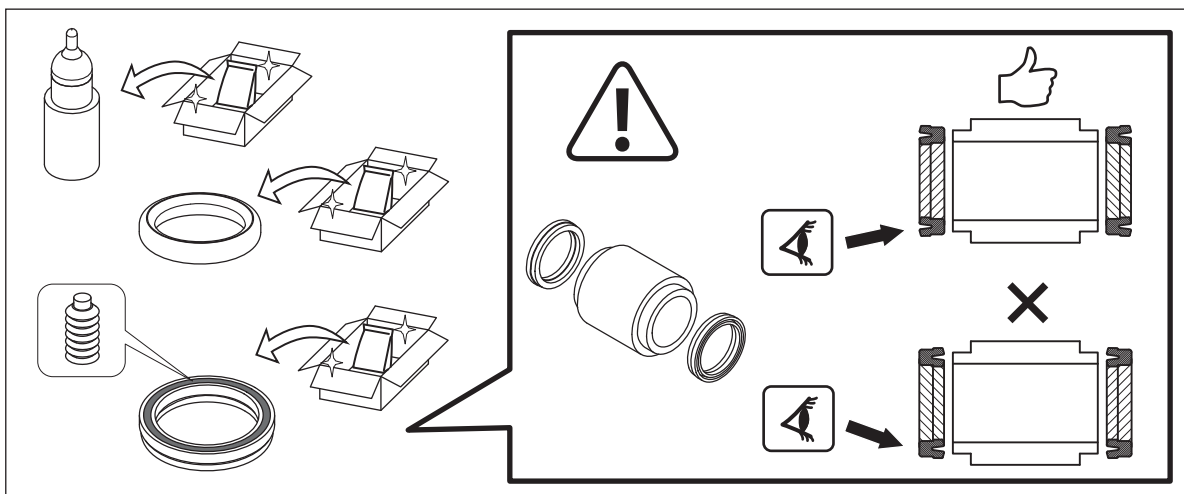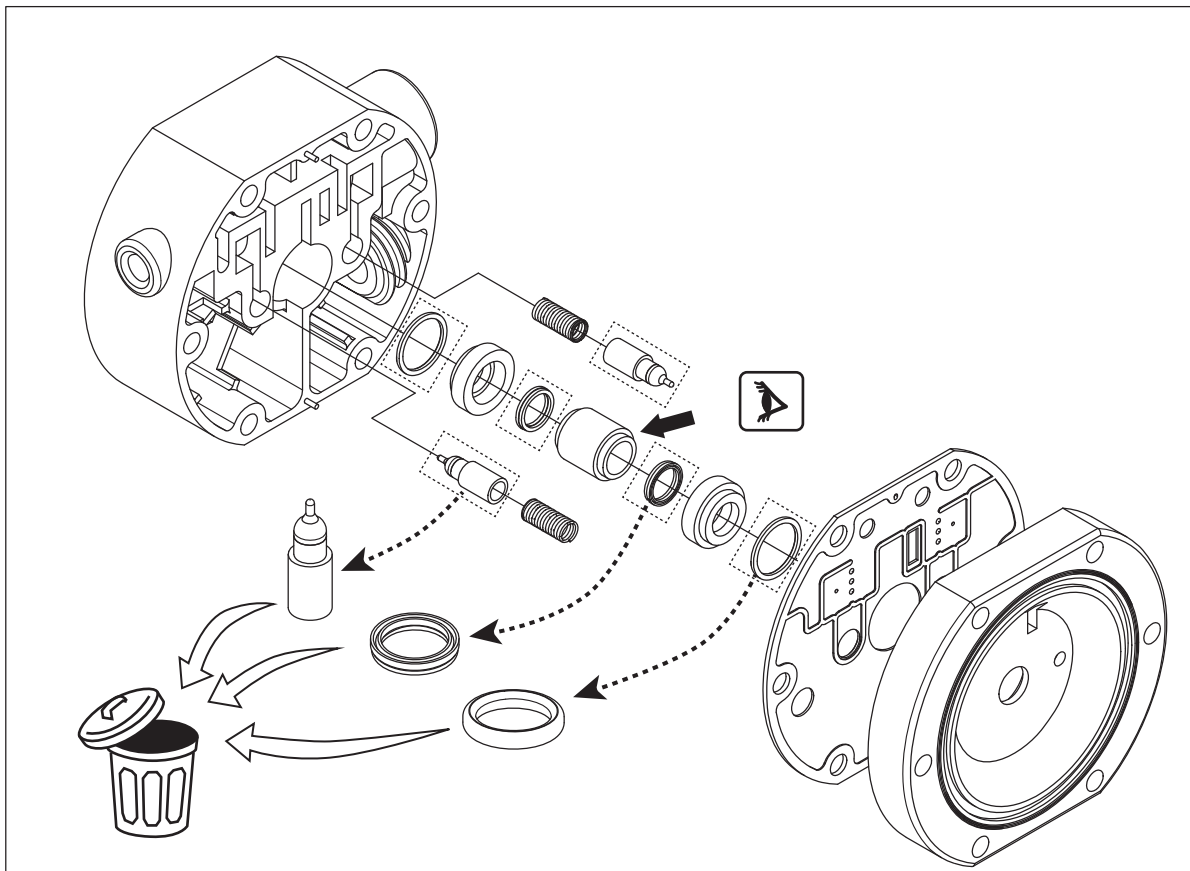

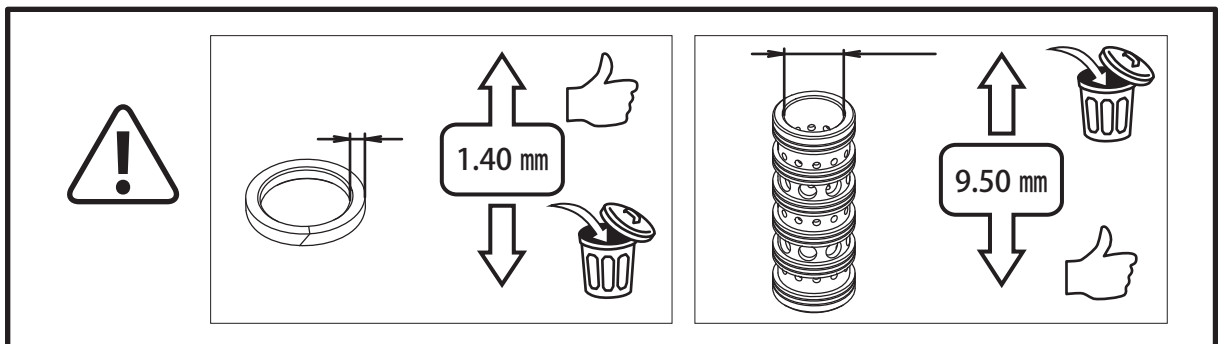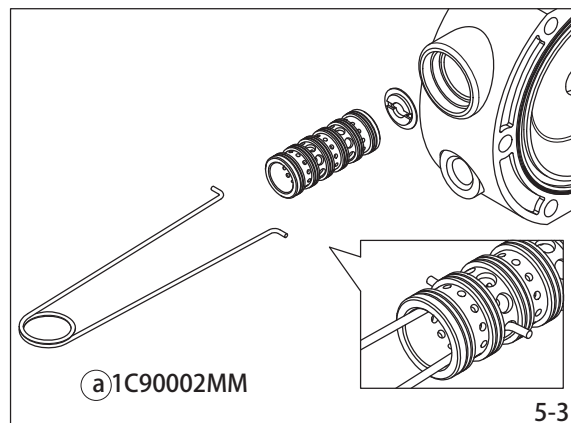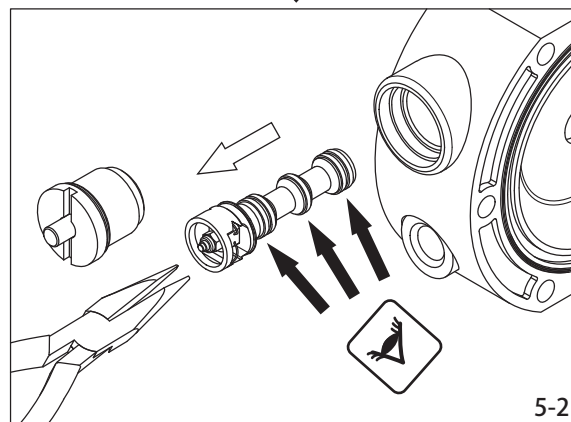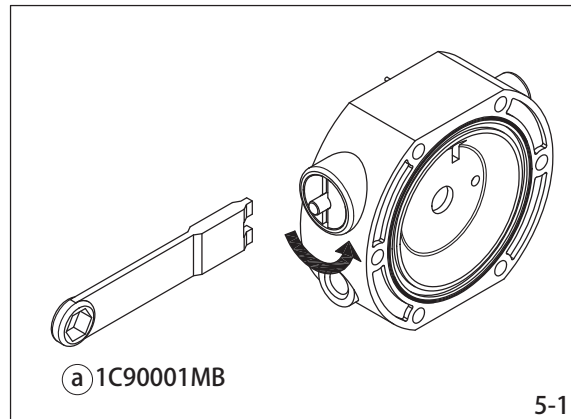

6

6-1

